


**IMPORTANT! KEEP FOR FUTURE REFERENCE.**

**USER MANUAL FOR MUSICAL  
BABY ROCKER "FIESTA"**

**FIESTA**

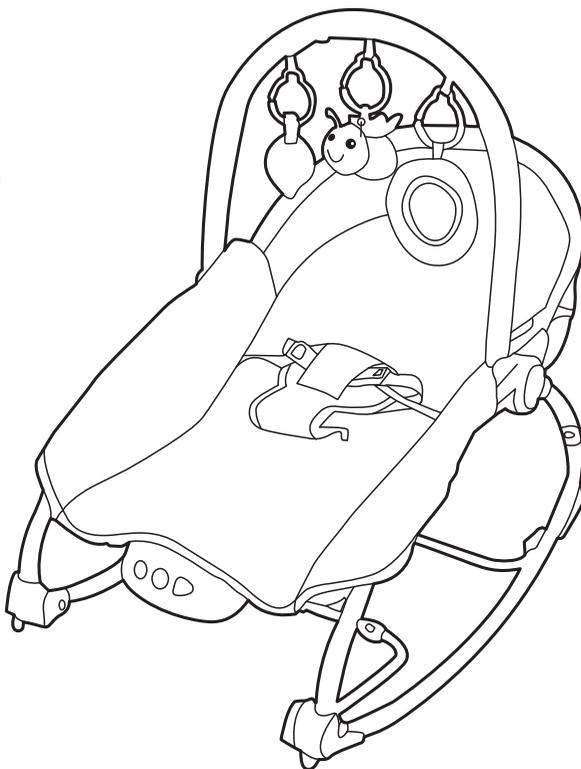

This **chipolino** product complies with the requirements of Product Safety Directive 2001/95/EU and Toy Safety Directive 2009/48/EU of the European Parliament and the council and European standard EN 12790:2009 "Child use and care articles - Reclined cradles", as well as all applicable European standards and the Consumer

## FOLLOW ALL WARNINGS, INSTRUCTIONS AND RECCOMENDATIONS IN THIS MANUAL IN ORDER TO GUARANTEE THE SAFE USE OF THIS PRODUCT:

- **WARNING!** NEVER LEAVE YOUR CHILD UNATTENDED!
- **WARNING!** DO NOT USE THIS ROCKER ONCE YOUR CHILD CAN SIT UNAIDED!
- **WARNING!** THIS PRODUCT IS NOT INTENDED FOR PROLONGED PERIODS OF USE AND SLEEPING.
- **WARNING!** IT IS DANGEROUS TO USE THIS ROCKER ON ELEVATED, SLOPED OR SOFT SURFACES!
- **WARNING!** ALWAYS USE THE RESTRAINT SYSTEM!
- **WARNING!** NEVER USE THE TOY BAR TO CARRY THE ROCKER!
- **WARNING!** KEEP AWAY FROM FIRE!
- Adult assembly is required!
- To be used only for babies with maximum weight 9 kg and aged approximately up to 6 months.
- This product does not replace a cot or a bed. Should your child need to sleep, place it in a suitable cot or bed.
- To be used for one child at a time!
- Do not use this rocker if any components are broken or missing!
- Do not use accessories or replacement parts other than those approved by the producer! If unapproved parts were used, the manufacturer declines all responsibility for the product.
- Do not make any changes or modifications to the rocker's structure. Contact the dealer or an authorized repair service for advice and/or repair.
- Do not put on the product additional wires or cords to avoid risk of suffocation!
- Only use the product for the purpose that it was designed for!
- Do not allow children under 3 years during the assembly in order to avoid access of the child to small parts!
- Keep away from children the plastic packaging in order to avoid the risk of suffocation!

## IMPORTANT! WARNINGS AND INSTRUCTIONS FOR THE BATTERIES USAGE


- Always secure the batteries compartment by putting its cover.
- Do not allow access of the children to the batteries and do not allow them to play with them!
- Use only batteries of the recommended in this manual type.
- Do not use batteries of different types.
- Do not mix new and used batteries.
- Follow the polarity shown in the batteries compartment.
- Remove the damaged and depleted batteries.
- Remove the batteries if the product will not be used for longer period.
- Do not throw the batteries in open fire. Do not attempt to open the batteries.
- **IMPORTANT!** The waste from the batteries must be discharged only in designated areas. Do not throw out the batteries in the household trash! You can contribute to saving the environment and protecting people's health by reducing the dangerous effect of battery components by helping recycling.



## PRODUCT FEATURES

- Intended for use for babies aged from 0 up to approximately 6 months;
- Intended for use for babies with maximum weight up to 9 kg;
- 3-point safety harness;
- 2 positions backrest
- Canopy
- Toy bar with soft toys;
- Music/vibration box.
- Batteries, 3 pcs, typeAA14 1,5V (not included)

## MAIN PARTS DIAGRAM

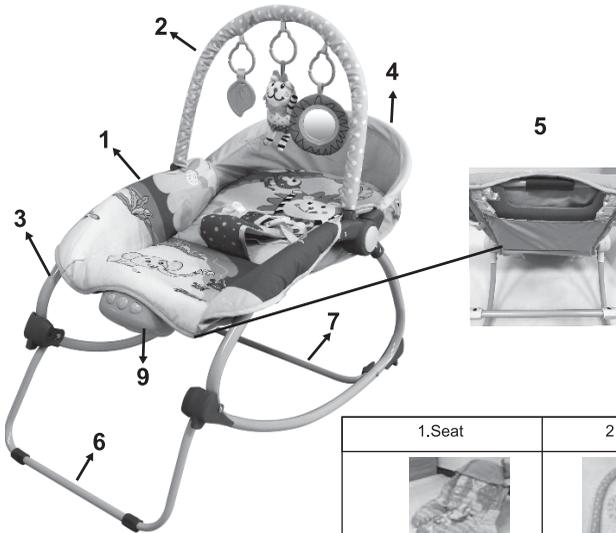

1.Seat	2. Toy bar	3. Left and right base of the frame
4.Canopy frame	5. Foot rest frame	6. Front support tube
7.Rear support tube	8.Screw (4 pcs) and nuts (4pcs)	9. Music box with vibration and lights

## INSTRUCTIONS FOR ASSEMBLY AND USE

**IMPORTANT!** Follow thoroughly the instructions for use and assembly steps given in the figures in this manual.

**CAUTION!** CHECK IF FIXING IS SECURE AFTER EACH ASSEMBLY STEP! Make sure all pins show through the respective openings.

Tools needed: To complete the assembly you need a screwdriver (not included in the set).

The assembly steps are numbered from 1 to 8. Use their descriptions below with the figure carrying the same number.

**1 – ASSEMBLING THE REAR SUPPORT TUBE**

**2 – ASSEMBLING THE FOOT REST FRAME**

**3 – ASSEMBLING THE FRONT SUPPORT FRAME**









**4 – ASSEMBLING THE CANOPY FRAME**








**5 – ASSEMBLING THE SEAT**

**6 – INSERTING BATTERIES IN THE MUSIC BOX WITH VIBRATION AND LIGHTS**

**7 – ATTACHING THE MUSIC BOX WITH VIBRATION AND LIGHTS**

**8 – ATTACHING THE TOYBAR**

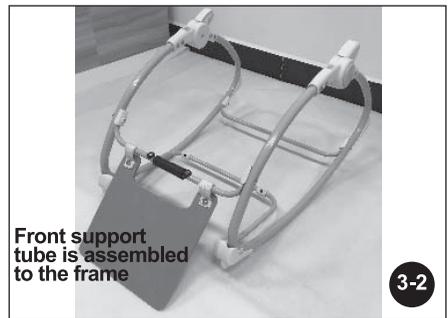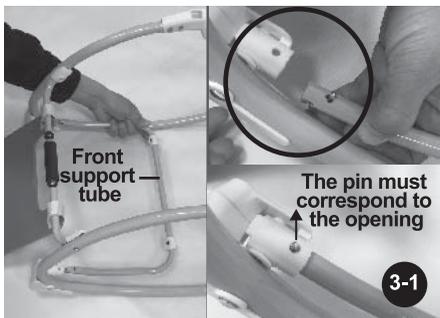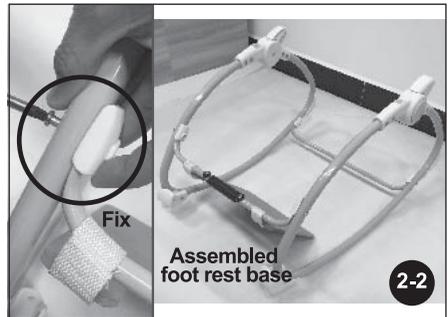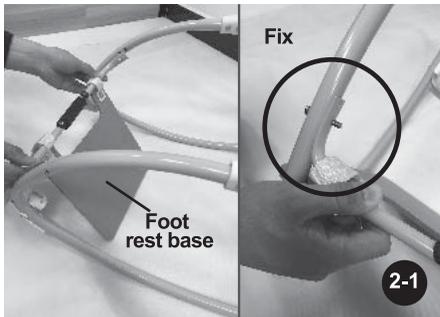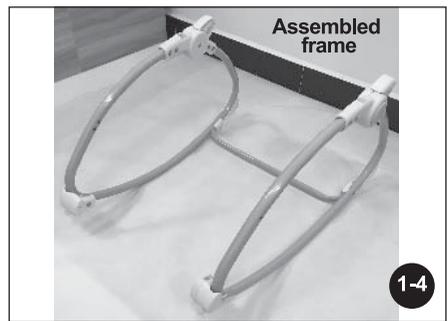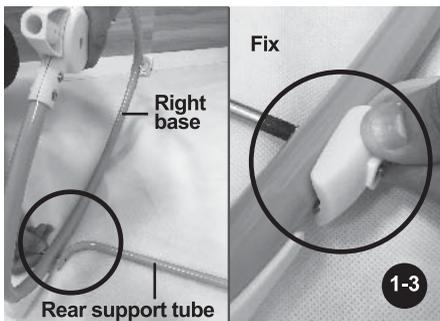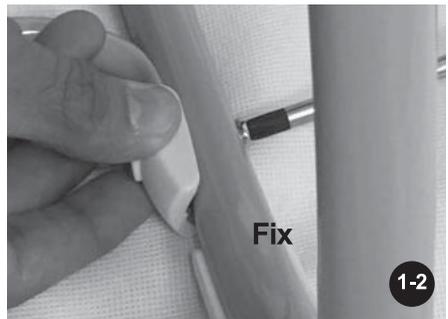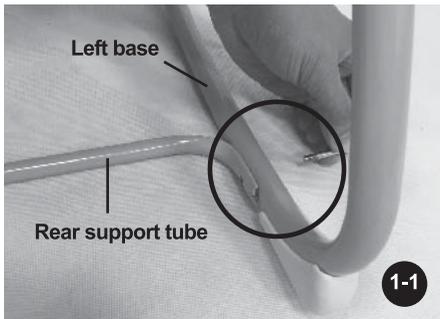

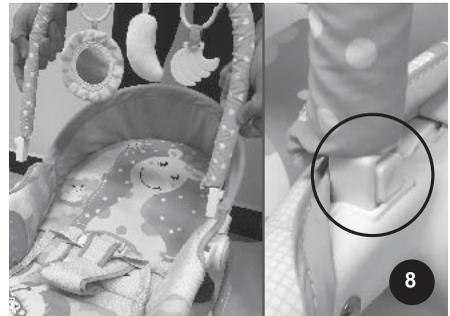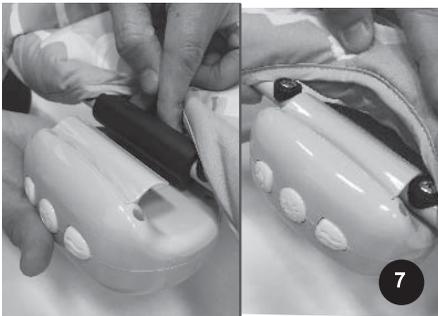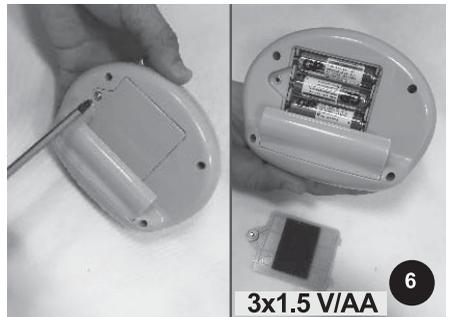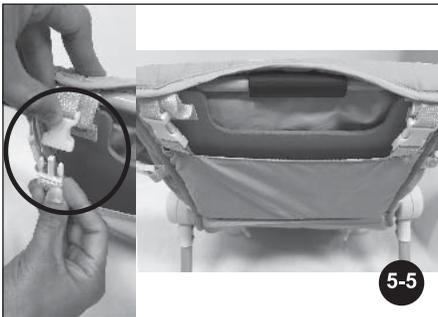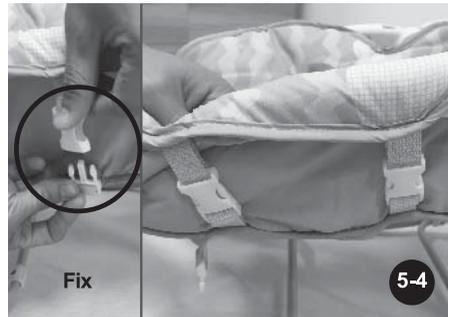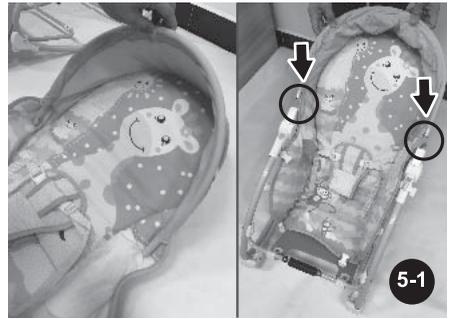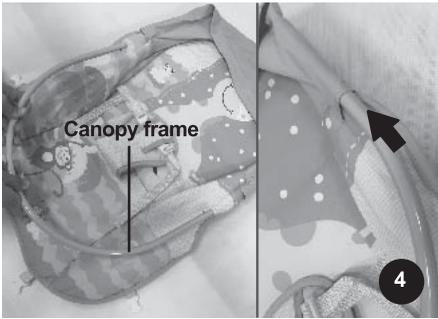

## FUNCTIONS

### Toy bar (fig A)

\*Toys (removable)

\*Toy bar is removable

Press simultaneously the buttons on the side of the toy bar and pull up

### 3-points safety harness (fig.B)

Adjustable in length to fit the height of the child

### Support base

### Front support tube (fig.E)

The two positions provide:

\*Rocking function

\*Static function

### Canopy (fig.C)

Adjusting: Open or close the buckles on the back side of the seat

### Adjusting the back rest (fig.D)

\*2 positions of the back rest

Press simultaneously the buttons on both sides of the bouncer and adjust the desired position

### Rear support tube

Provides more stability

### Musical box with vibration and light (fig. F)

1. Music






\*8 Consecutive melodies

\*3 Sound levels (low, medium and high)

2. Vibration: 3 levels

(low, medium, high)

3. Lights - blinking

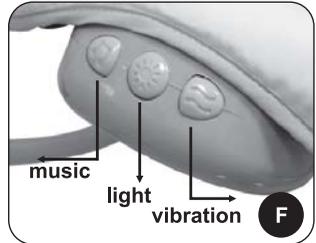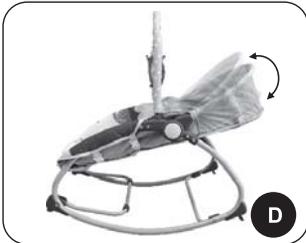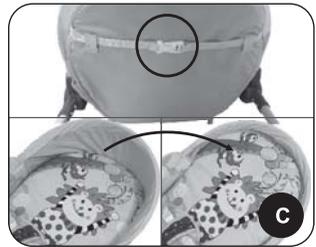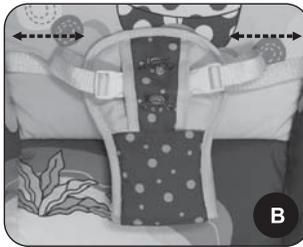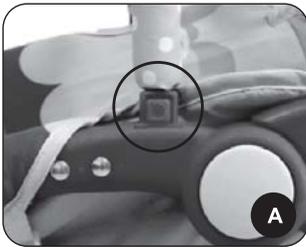

## CARE AND MAINTENANCE

- Clean the plastic and metal parts with damp cloth.
- Clean all fabric parts and toys with damp cloth. Follow the washing labels.
- Do not tumble dry or dry in drying machine!
- Do not soak in water or other liquids the music/vibration box!
- Do not use abrasive detergents or solvents. Do not bleach.
- Do not place other objects on top of the bouncer as this may damage its structure, fabric parts or music/vibration box.
- Store the product in a clean and dry place. Do not expose the bouncer to direct sun light, rain, moisture or sudden temperature changes!

**Fabric composition:**

100% polyester

**Soft toys:**

The toys are marked with 

**Materials used:** textile, metal, plastic



SHEFI017xxx/RK001



---

1 Golyamokonarsko shosse, Plovdiv, BULGARIA  
[www.chipolino.com](http://www.chipolino.com)