


beper

- PIASTRA FRISÉ - MANUALE DI ISTRUZIONI
- HAIR CRIMPER - USE INSTRUCTIONS
- PLAQUE POUR FRISÉ - MANUEL D'INSTRUCTIONS
- HAARGLÄTTER FRISÉ - BETRIEBSANLEITUNG
- PLACA PARA EL FRISÉ - MANUAL DE INSTRUCCIONES
- PROSTOWNICA DO STYLIZACJI WŁOSÓW - INSTRUKCJA OBSŁUGI
- PLAUKŲ FRISÉ - NAUDOJIMO INSTRUKCIJA
- HAIR CRIMPER PRO DOKONALÉ VLNITÉ VLASY
NÁVOD K POUŽITÍ

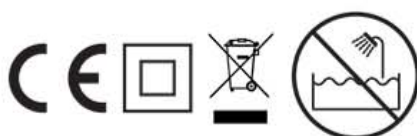

Cod.: 40.923

GENERAL SAFETY ADVICE

READ THE OPERATING INSTRUCTIONS CAREFULLY BEFORE FIRST USE OF THE APPLIANCE.

Read the following instructions carefully, since they give you useful safety information about installation, use and maintenance and help you avoid mishaps and possible accidents.

Remove the packing and make sure that the appliance is intact, with special attention to the supply cable. The elements of the packing (plastic bags, polystyrene, etc) do not have to be accessible to the children, in order to preserve them from danger sources.

It is recommended not to throw these packing material in the domestic waste, but to deliver them to the appropriate station of collection or destruction refusals, asking eventually information to the manager of the Sanitation Department of your own municipality.

Before connecting the appliance make sure that the mains voltage corresponds to the data specified on the label.

If the plug does not suit the socket, let it be replaced with another suitable plug by qualified personnel only, which shall also ensure that the section of the socket cables is suitable for your appliance power absorption.

Never pull the supply cord to unplug the appliance.

Make sure that the supply cord never comes into contact with hot or cutting surfaces

Do not use this appliance if the supply cord is damaged. In case of damage, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Only connect this appliance on alternating current

Generally, the use adaptors multiple plugs and/or extensions is not recommended; should they be necessary, please use only simple or multiple adaptors and extensions in compliance with the safety rules in force, making sure that the capacity absorption limit marked on the simple adaptors and the extensions and the maximum power limit marked on the multiple adaptor are not exceeded.

This appliance is to be destined to its special purpose only.

Any other use is to be considered as improper and thus dangerous. The manufacturer cannot be responsible for any damages deriving from improper, wrong or incautious use.

To avoid any heating risk, it is recommended to unroll completely the supply cord and to unplug the appliance, when not used.

Before cleaning, always unplug the appliance.

To protect against electric shock, do not immerse cord, plug or any parts of the appliance into water or other fluids.

Do not hold the appliance with wet hands or feet.

Do not hold the appliance with naked feet.

Do not expose the appliance to atmospheric agents such as rain, wind, snow, hail.

Do not use the appliance near explosives, highly flammable materials, gases, burning flames, heaters.

Do not allow children, disabled people or every people without experience or technical ability to use the appliance if they are not properly watched over. Close supervision is necessary when any appliance used by or near children.

Make sure that children do not play with this appliance.

PRODUCT DESCRIPTION:

- 1 Digital display screen
- 2 Adjustable electronic temperature regulator
- 3 Swivel cord
- 4 Power switch
- 5 Ceramic coating plate



HOW TO USE IT:

1. Wash your hair, dry using a hair dryer and untangle with a largetooth comb
 2. Insert the power plug into the socket, then press and hold the power switch for approximately 3-5 seconds to turn on the styling straightener
 3. Press the "+" key can increase the set value
 4. Press the "-" key can reduce the set value
 5. Pressing the button "+" or "-" two time quickly can lock the keys. Pressing the switch two time quickly again can unlock them.
 6. The temperature range is 100° to 220°. Rapid heating up to 100° within 20 seconds. The topmost temperature of the hair straightener is 220°.
- When the selected temperature level display stop blinking (and glows) , the styling straightener has reached the selected temperature.
7. Safety device: Auto turn off after a half of hour when you forgot unplug the power.

WARNING:

The barrel of the attachment fitted will become very hot when the appliance is plugged in and switched on. Avoid direct contact with the skin, particularly the eyes, face, neck and ears. Always place on a firm surface using the safety stand on base of the appliance. Do not place the appliance on any heat sensitive Surfaces.

MAINTENANCE:

When not in use, your appliance should be disconnected and stored in a safe, dry location out of reach of children. Do not wrap the cord around the plates especially when hot.

CLEANING:

Unplug the unit and allow to cool completely.

Clean the plates using a soft, damp cloth, without detergent, to preserve the optimal quality of the plates. Do not scratch the plates.

TECHNICAL DATA:

Power: 45W

Voltage: 220-240V~50Hz

For any improvement reasons, Beper reserves the right to modify or improve the product without any notice.



The European directive 2011/65/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.