

beper

- **ARRICCIACAPELLI - MANUALE DI ISTRUZIONI**
 - **HAIR CURLING - USE INSTRUCTIONS**
 - **FRISEUR - MANUEL D'INSTRUCTIONS**
 - **LOCKENSTAB - BETRIEBSANLEITUNG**
- **RIZADOR DE PELO - MANUAL DE INSTRUCCIONES**




Cod.: 40.963

SAFETY CAUTIONS

1. Do not block the air intake or outlet areas during use. Blocking the air flow can result in overheating which may cause burns or mechanical damage. Rolling too large a bunch of hair around the brush will not allow proper curling and also block the air outlet.
2. If the air intake is blocked by the hand during use, for example, the thermal switch may function and turn off the device. This does not mean the device has been damaged and it should shortly return to normal. However, repetition of this sequence can result in damage.
3. When the styler is switched on, do not leave it near bedding, paper or other combustible objects. Also, do not use the styler near gas or other highly combustible items.
4. Avoid dropping or subjecting the device to excessive shock. Do not pull the cord with unnecessary force.
5. After use, switch the styler off then unplug the cord from the receptacle.
6. Wipe the housing clean with neutral detergent. Do not use thinner or benzene. Do not directly apply hair oils or lotions to the brush or comb. (Indirect contact from the hair is permissible.) Do not store near such cosmetics as they may deform the housing, comb and brush.
7. Do not use in a bath area or with wet hands. Do not store in a damp area.
8. If damage occurs during use, the motor does not function properly, the warm air flow stops, or other abnormality occurs, cut off the power supply immediately and have the device repaired by an authorized repairman. Do not tamper with the inner mechanism.
9. If the supply cord is damaged it must be repaired by the Authorized Service Agent.
10. This appliance must be installed following the national regulations for electrical installations.
11. - The appliance isn't destined for the use of children or person with physical or mental problems and without experience nor knowledge; unless they make it down control of a responsible or professional for the use of the appliance.
12. - **WARNING:** In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.

PRODUCT DESCRIPTION

1. Cool tip
2. Curling rod
3. On/off light
4. On/off switch
5. Swivel cord

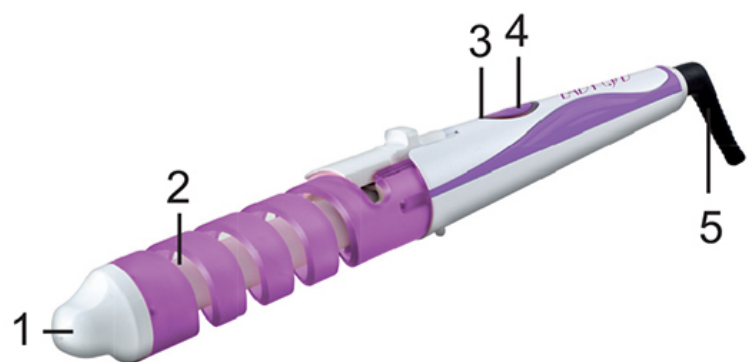

COMMISSIONING

1. Remove all the packing materials.
2. Insert the plug in a duly installed 230 V/50 Hz socket.
3. Switch on the appliance:
Position 0: Off
Position 1: On
4. Switch off the appliance after use and pull out the plug. Leave it cool for a few minutes before putting it away.

CURLING BASICS

1. Plug the curling tong cord into any household outlet (230V). Press "ON/OFF" button (indicator light will illuminate). The tong will heat up very quickly. To turn off press "ON/OFF" button again (light will go off).

Never leave your curling tong on and unattended.

2. Section damp or dry hair evenly, and comb through before styling. Pressing the automatic curl release, place curling tong midway up the hair section and spread hair evenly between spoon and barrel. Gently slide curling tong down to hair ends. To avoid crimped ends, make sure they are securely wound under the spoon in the direction of the desired curl. Remember always place the spoon on top of a section when making a curl you want rolled under; place the spoon under the section when making a flip style.

3. Wind the hair up as far as you want it curled, being careful not to let the tong touch the scalp. Hold in place for 5-8 seconds depending on the texture and length of your hair.

For tighter, bouncier curls, roll less hair. For loose, free-flowing curls, roll more hair.

4. To remove curling tong press the automatic curl release and pull tong away. To "set" the curl, do not comb or brush hair until it cools.

WARNING

The barrel will get very hot within a few seconds and should not be placed in contact with the skin after the curling tong is turned ON. The special application of this curling tong will result in an extremely hot barrel when the high setting is chosen. Always do a test curl before using the tong to insure the proper setting for your hair type.

CARE AND MAINTENANCE

This appliance is intended for household use. Unplug product before cleaning. The product must be cleaned only when cool.

Use a soft non-abrasive cloth that is slightly dampened with water to wipe styling barrel surface. Do not allow water or any other liquid to get into the handle of the iron. Any other servicing should be performed by a qualified service centre.

The product should not be stored while hot or plugged in. When not in use, allow curling iron to cool, then simply put back in the box and store out of reach of children in safe, dry location. Never wrap the cord around the curling iron. This could cause the cord to wear prematurely and break.

TECHNICAL DATA

Power: 30W

Power supply: 230V~ 50Hz

For any improvement reasons, Beper reserves the right to modify or improve the product without any notice.



The European directive 2011/65/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

GUARANTEE CERTIFICATE

This appliance has been checked in the factory. From the date of original purchase a 24 month guarantee applies to material and production defects. The purchase receipt and the guarantee certificate must be submitted together in case of claim to guarantee.

For any technical assistance, please contact directly the seller or our head office in order to preserve the appliance's efficiency and NOT TO void the guarantee. Any intervention on this appliance by non-authorized persons will automatically void the guarantee.

Guarantee conditions

If the appliance shows defects as a result of faulty material and/or production during the period of guarantee, we guarantee repair free of charge on condition that:

- The appliance has been used properly and for the purpose for which it has been intended.
- Repairs are professionally carried out by qualified persons who are appointed by the supplier.
- The purchase receipt shall be presented.
- The appliance showing a fair wear and tear shall not be covered by this guarantee.

Therefore, any part that could be accidentally broken or having visible signs of use in consumable products (such as lamps, batteries, heating elements...) is excluded from the guarantee, and any defect whatsoever resulting from non-respect of the rules for use, negligence in usage and/or maintenance of the appliance, damage during transport and any other damage not attributable the supplier.

For every defect that could not be repaired within the guarantee period, the appliance will be replaced free of charge.

Technical assistance

Even after the guarantee period we will always pay attention to repairs for defected appliances. For technical assistance and/or repairs after the guarantee period you can directly contact the below address:

CONTACT YOUR DISTRIBUTOR IN YOUR COUNTRY OR AFTER SALES DEPARTMENT
BEPER. E-MAIL assistenza@beper.com
WHICH WILL FORWARD YOUR ENQUIRIES TO YOUR DISTRIBUTOR.