

beper

- **ARRICCIACAPELLI ROTANTE - MANUALE DI ISTRUZIONI**
 - **ROTATING HAIR CURLER - USE INSTRUCTIONS**
 - **FER À FRISER ROTATIF - MANUEL D'INSTRUCTIONS**
- **ROTIERENDER LOCKENSTAB - BETRIEBSANLEITUNG**
 - **RIZADOR DE PELO RODEANTE**
 - MANUAL DE INSTRUCCIONES**
- **ΠΕΡΙΣΤΡΕΦΟΜΕΝΟ ΣΙΔΕΡΟ ΓΙΑ ΜΠΟΥΚΛΕΣ**
 - ΕΓΧΕΙΡΙΔΙΟ ΟΔΗΓΙΩΝ**



Cod.: 40.400

GENERAL SAFETY ADVICE

READ THE OPERATING INSTRUCTIONS CAREFULLY BEFORE FIRST USE OF THE APPLIANCE.

Read the following instructions carefully, since they give you useful safety information about installation, use and maintenance and help you avoid mishaps and possible accidents.

Remove the packing and make sure that the appliance is intact, with special attention to the supply cable. The elements of the packing (plastic bags, polystyrene, etc) do not have to be accessible to the children, in order to preserve them from danger sources.

It is recommended not to throw these packing material in the domestic waste, but to deliver them to the appropriate station of collection or destruction refusals, asking eventually information to the manager of the Sanitation Department of your own municipality.

Before connecting the appliance make sure that the mains voltage corresponds to the data specified on the label.

If the plug does not suit the socket, let it be replaced with another suitable plug by qualified personnel only, which shall also ensure that the section of the socket cables is suitable for your appliance power absorption.

Never pull the supply cord to unplug the appliance.

Make sure that the supply cord never comes into contact with hot or cutting surfaces

Do not use this appliance if the supply cord is damaged. In case of damage, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Only connect this appliance on alternating current

Generally, the use adaptors multiple plugs and/or extensions is not recommended; should they be necessary, please use only simple or multiple adaptors and extensions in compliance with the safety rules in force, making sure that the capacity absorption limit marked on the simple adaptors and the extensions and the maximum power limit marked on the multiple adaptor are not exceeded.

This appliance is to be destined to its special purpose only.

Any other use is to be considered as improper and thus dangerous. The manufacturer cannot be responsible for any damages deriving from improper, wrong or incautious use.

To avoid any heating risk, it is recommended to unroll completely the supply cord and to unplug the appliance, when not used.

Before cleaning, always unplug the appliance.

To protect against electric shock, do not immerse cord, plug or any parts of the appliance into water or other fluids.

Do not hold the appliance with wet hands or feet.

Do not hold the appliance with naked feet.

Do not expose the appliance to atmospheric agents such as rain, wind, snow, hail.

Do not use the appliance near explosives, highly flammable materials, gases, burning flames, heaters.

Do not allow children, disabled people or every people without experience or technical ability to use the appliance if they are not properly watched over. Close supervision is necessary when any appliance used by or near children.

Make sure that children do not play with this appliance.

If you decide not to use the appliance any longer, make it unserviceable by simply cutting the supply cable after disconnecting the plug from the socket.

ALSO MAKE ANY DANGEROUS PARTS UNSERVICEABLE, ESPECIALLY FOR CHILDREN WHO COULD PLAY WITH THE APPLIANCE.

PRODUCT DESCRIPTION

- 1 Removable anti-scald device
- 2 Left/right directional switch
- 3 Temperature control switch
- 4 5 grades speed control
- 5 360° swivel cord



OPERATING INSTRUCTIONS

1. Insert the plug of the Hair Curler into a suitable mains outlet. Press the power button to switch it on. The LED display will light up with the sound of beep and show the initial set temperature at 180°. Temperature range is from 120° to 220°.

2. Press "M" to come into the convertible adjustment mode, which can convert among temperature, rotate speed and curl time.

When appliance is in the speed mode, "R" will be showed on the LED display screen.

When appliance is in the curl time mode, "T" will be showed on the LED display screen. Curl time with sound of beep from 3 to 12 seconds. Curl time function means start time from appliance stop rotating to release the hair, there will be a beeping sound to remind user when arrive time. The default time is 3 seconds and the maximum is 12 seconds. Five rotate speed settings from 001 to 005

3. Pressing the "+" button increases the set temperature by values of 10°. The same operation can increase the set point of rotate speed or prompting time.

4. The "-" button reduces the set temperature by 10°. The same operation can increase the set point of rotate speed or prompting time.

Use lower temperatures for fine, bleached or damaged hair, medium temperatures for normal, wavy hair, and higher temperatures for thick, coarse or ethnic hair.

5. With one hand hold on to the appliance and with the other hold the hair which needs to be styled. Each time please take a small bunch of hair, and with the appliance clamp them, near the roots and pull it towards the tips to style your hair.

6. Repeat as necessary to get the ideal effect.

7. This machine has a one-hour automatic shutdown function. Timed from the last operation, the appliance will automatically turn off if not used. It will heat up again only after pressing the power switch.

8. Push the power button for three seconds to turn off the machine and disconnect the power supply after finishing the operation.

CARE AND MAINTANCE

1. Always unplug the appliance and let it cool down prior to cleaning.

2. Wipe the housing and attachments with a soft and damp cloth. Do not allow water or any other liquid to get into the unit.

3. Do not clean the appliance with solvents, paint thinner, gasoline or alcohol.

4. Do not use chemical cleaners.

TECHNICAL DATA:

Voltage: 100V-240 V ~ 50Hz-60 Hz

Power: 45 W

For any improvement reasons, Beper reserves the right to modify or improve the product without any notice.



The European directive 2011/65/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

GUARANTEE CERTIFICATE

This appliance has been checked in the factory. From the date of original purchase a 24 month guarantee applies to material and production defects. The purchase receipt and the guarantee certificate must be submitted together in case of claim to guarantee.

The guarantee is valid only with a guaranty certificate and proof of purchase (fiscal receipt) indicating the date of purchase and the model of the appliance

For any technical assistance, please contact directly the seller or our head office in order to preserve the appliance's efficiency and NOT TO void the guarantee. Any intervention on this appliance by non-authorized persons will automatically void the guarantee.

Guarantee conditions

If the appliance shows defects as a result of faulty material and/or production during the period of guarantee, we guarantee repair free of charge on condition that:

- The appliance has been used properly and for the purpose for which it has been intended.
- The appliance has not been tampered with, otherwise it is not maintainable.
- The purchase receipt shall be presented.
- The appliance showing a fair wear and tear shall not be covered by this guarantee.

Therefore, any part that could be accidentally broken or having visible signs of use in consumable products (such as lamps, batteries, heating elements...) the aesthetic parts are excluded from the guarantee, and any defect whatsoever resulting from non-respect of the rules for use, negligence in usage and/or maintenance of the appliance, carelessness, wrong or improper installation, damage during transport and any other damage not attributable the supplier.

For every defect that could not be repaired within the guarantee period, the appliance will be replaced free of charge.

In any case, if the part to be replaced for defect, breakage or malfunction is an accessory and/or a detachable part of the product, Beper reserves the right to replace only the very part in question and not the entire product

Technical assistance

Even after the guarantee period we will always pay attention to repairs for defected appliances. For technical assistance and/or repairs after the guarantee period you can directly contact the below address:

CONTACT YOUR DISTRIBUTOR IN YOUR COUNTRY OR AFTER SALES DEPARTMENT
BEPER. E-MAIL assistenza@beper.com
WHICH WILL FORWARD YOUR ENQUIRIES TO YOUR DISTRIBUTOR.