

beper

- SAUNA FACCIALE - MANUALE DI ISTRUZIONI
 - FACIAL SAUNA - USE INSTRUCTIONS
- SAUNA FACIAL - MANUEL D'INSTRUCTIONS
 - GESICHTSSAUNA - BETRIEBSANLEITUNG
- SAUNA FACIAL - MANUAL DE INSTRUCCIONES



Cod.: 40.967N

PRECAUTIONS

READ THE FOLLOWING INSTRUCTIONS CAREFULLY, SINCE THEY GIVE YOU USEFUL SAFETY INFORMATION ABOUT INSTALLATION, USE AND MAINTENANCE AND HELP YOU AVOID MISHAPS AND POSSIBLE ACCIDENTS.

Remove the packing and make sure that the appliance is intact, with special attention to the supply cable.

The elements of the packing (plastic bags, polystyrene, etc) do not have to be accessible to the children, in order to preserve them from danger sources. It is recommended not to throw these packing material in the domestic waste, but to deliver them to the appropriate station of collection or destruction refusals, asking eventually information to the manager of the Sanitation Department of your own municipality.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Before connecting the appliance make sure that the mains voltage corresponds to the data specified on the label.

The appliance can be damaged if the voltage is not correct.

If the plug does not suit the socket, let it be replaced with another suitable plug by qualified personnel only, which shall also ensure that the section of the socket cables is suitable for your appliance power absorption.

Generally, the use adaptors multiple plugs and/or extensions is not recommended; should they be necessary, please use only simple or multiple adaptors and extensions in compliance with the safety rules in force, making sure that the capacity absorption limit marked on the simple adaptors and the extensions and the maximum power limit marked on the multiple adaptor are not exceeded.

Do not use the appliance if the cable or the plug shows any damages.

Do not use the appliance after a possible irregular working. In this case, switch it off and do not break it open. Refer to an authorized Beper after-sale service for repair and require original spare parts only. Failing to follow these instructions may impair the safety of your appliance.

This appliance is to be destined to its special purpose only. Any other use is to be considered as improper and thus dangerous. The manufacturer cannot be responsible for any damages deriving from improper, wrong or incautious use. This appliance is for HOUSEHOLD USE ONLY.

To protect against electric shock, do not immerse cord, plug or any parts of the appliance into water or other fluids.

Do not use the appliance near explosives, highly flammable materials, gases or burning flames.

Do not allow children, disabled people or every people without experience or technical ability to use the appliance if they are not properly watched over. Close supervision is necessary when any appliance used by or near children.

Do not hold the appliance with wet hands or feet.

Never use any accessories but those provided for by Beper. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.

Do not use the appliance near the bath, the shower, the wash-basin or anywhere water can turn out to be a source of danger.

Do not pull the mains cable or the appliance itself when disconnecting the plug from the socket.

Do not let cord hang over edge of table, or touch hot surface.

Do not expose the appliance to atmospheric agents such as rain, wind, snow, hail. Do not use outdoors.

Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.

If you decide not to use the appliance any longer, make it unserviceable by simply cutting the supply cable after disconnecting the plug from the socket. Also make any dangerous parts unserviceable, especially for children who could play with the appliance.

Let other potential users read these instructions.

Keep these instructions

USE ADVICE

Do not introduce objects or material into the facial sauna.

Do not cover the facial sauna with fabric or objects when working.

Do not use the facial sauna with wet hands.

Do not use the facial sauna if you have sensitive skin or bad blood circulation.

Do not use the facial sauna directly on inflated parts, if ignition or cutaneous eruption.

If any doubt on your health, contact your doctor before using the facial sauna.

Do not use the facial sauna instead of medical treatments.

Do not place the facial sauna close to face for too long periods, that could cause burns.

Do not use additives.

Do not use the facial sauna when bathing or having a shower.

Always remove the plug from the socket when filling the tank with water.

Fill the tank only with water.

Do not overfill the tank to avoid water overflow on the base.

Do not immerge into water.

Place the facial sauna in place away from water and keep it in a dry place.

Do not place the facial sauna on soft surface, that could fall or outflow.

Do not cover or block the steam holes exit.

Do not use the facial sauna under a cover or cushion ; that could damage the appliance, cause fire, electric shocks or injuries by burns.

Keep away from children.

Do not let the facial sauna without supervision when on and plugged on the socket.

After use, switch off the appliance and unplug from the socket.

For household only.

Do not use the facial sauna outdoors.

DESCRIPTION

1 – Facial mask

2 – Water tank/steam bowl

3 – Base

4 – Switch on/off 0/1/2

5 – No-skid feet

6 – Cord supply



USE INSTRUCTIONS

Do not use the facial sauna to replace medical treatment.

Fill the tank/steam bowl with water, using the provided graduated container.

Do not overfill the tank.

Insert the facial mask (1).

Plug the cord supply (6) to the socket.

Switch on the facial sauna by pressing on (4) I; the red light illuminates.

Wait for at least 1 minute to get hot water and steam.

Put your face as near as possible on the mask (1).

Keep the position for about 1 to 2 minutes, according to your resistance to heat.

If unpleasant feelings or excessive heat, move away the face from the mask (1).

Do not cover, even with the face on the facial sauna.

You can repeat the treatment according to own desire and requirements.

CLEANING AND CARE

Before cleaning the facial sauna, switch off the appliance and unplug from the socket.

Let the facial sauna cool.

Remove water and well dry the mask (1) that can be washed with water.

Clean the base (3) with a softly wet cloth and dry with a dry cloth.

Do not immerse into water.

Do not use abrasive substances or detergent, that could damage the facial sauna.

Keep the facial sauna in a dry place, keep away from children.

TECHNICAL DATA

Power: 80-100W

Power supply: 220-240V ~ 50/60Hz

For any improvement reasons, Beper reserves the right to modify or improve the product without any notice.



The European directive 2011/65/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

GUARANTEE CERTIFICATE

This appliance has been checked in the factory. From the date of original purchase a 24 month guarantee applies to material and production defects. The purchase receipt and the guarantee certificate must be submitted together in case of claim to guarantee.

For any technical assistance, please contact directly the seller or our head office in order to preserve the appliance's efficiency and NOT TO void the guarantee. Any intervention on this appliance by non-authorized persons will automatically void the guarantee.

Guarantee conditions

If the appliance shows defects as a result of faulty material and/or production during the period of guarantee, we guarantee repair free of charge on condition that:

- The appliance has been used properly and for the purpose for which it has been intended.
- Repairs are professionally carried out by qualified persons who are appointed by the supplier.
- The purchase receipt shall be presented.
- The appliance showing a fair wear and tear shall not be covered by this guarantee.

Therefore, any part that could be accidentally broken or having visible signs of use in consumable products (such as lamps, batteries, heating elements...) is excluded from the guarantee, and any defect whatsoever resulting from non-respect of the rules for use, negligence in usage and/or maintenance of the appliance, damage during transport and any other damage not attributable the supplier.

For every defect that could not be repaired within the guarantee period, the appliance will be replaced free of charge.

Technical assistance

Even after the guarantee period we will always pay attention to repairs for defected appliances. For technical assistance and/or repairs after the guarantee period you can directly contact the below address:

CONTACT YOUR DISTRIBUTOR IN YOUR COUNTRY OR AFTER SALES DEPARTMENT
BEPER. E-MAIL assistenza@beper.com
WHICH WILL FORWARD YOUR ENQUIRIES TO YOUR DISTRIBUTOR.