

# *beper*

- SET MANICURE E PEDICURE - MANUALE DI ISTRUZIONI
- MANICURE AND PEDICURE SET - USE INSTRUCTIONS
- SET MANUCURE ET PÉDICURE - MANUEL D'INSTRUCTIONS
- WIEDERAUFLADBARES MANIKÜRE-PEDIKÜRE-SET  
BETRIEBSANLEITUNG
- SET MANICURA Y PEDICURA - MANUAL DE INSTRUCCIONES



Cod.: 40.968

## PRECAUTIONS

Read the following instructions carefully, since they give you useful safety information about installation, use and maintenance and help you avoid mishaps and possible accidents. Keep carefully these instructions.

Remove the packing and make sure that the appliance is intact. If any doubt do not use this appliance and contact a qualified person. The elements of the packing (plastic bags, polystyrene, etc) do not have to be accessible to the children, in order to preserve them from danger sources. The installation must be made according manufacturer's instructions

This appliance is to be destined to its special purpose only. Any other use is to be considered as improper and thus dangerous. The manufacturer cannot be responsible for any damages deriving from improper, wrong or incautious use.

Before connecting the appliance make sure that the mains voltage corresponds to the data specified on the label.

In case of breakdown and/or dysfunction of the appliance, turn off and do not manipulate it.

If you need to make it repair only contact the assistance centre authorized by the manufacturer (to know the nearest one please call +39045 7134674) and ask for original spare parts. If no respect of these instructions mentioned above can compromise the security of the device. Before cleaning and care, unplug the appliance from the socket by pressing the switch or unplugging the cord.

### Particularly:

Do not touch the appliance with damp or wet hands if the appliance is plugged on the socket ;

Do not use the appliance with naked feet if the appliance is plugged on the socket ;

Do not let children or disabled people use this appliance without supervision ;

Do not let this appliance near to explosive and/or inflammable substances ;


Do not expose this appliance to atmospheric agents such as rain, sun, etc...

## USE ADVICE

To keep this appliance in good conditions, it is recommended to turn off the appliance for 15 minutes when used for 20 minutes to avoid heat.

## PRINCIPAL COPONENTS

1. Fine shaping disk
2. Rough shaping disk
3. Fine skin remover
4. Large skin remover
5. Rough grain cone
6. Thin sharp point
7. Thick sharp point
8. Polishing disk
9. Cuticle lifter
10. Unit
11. Charger
12. Case

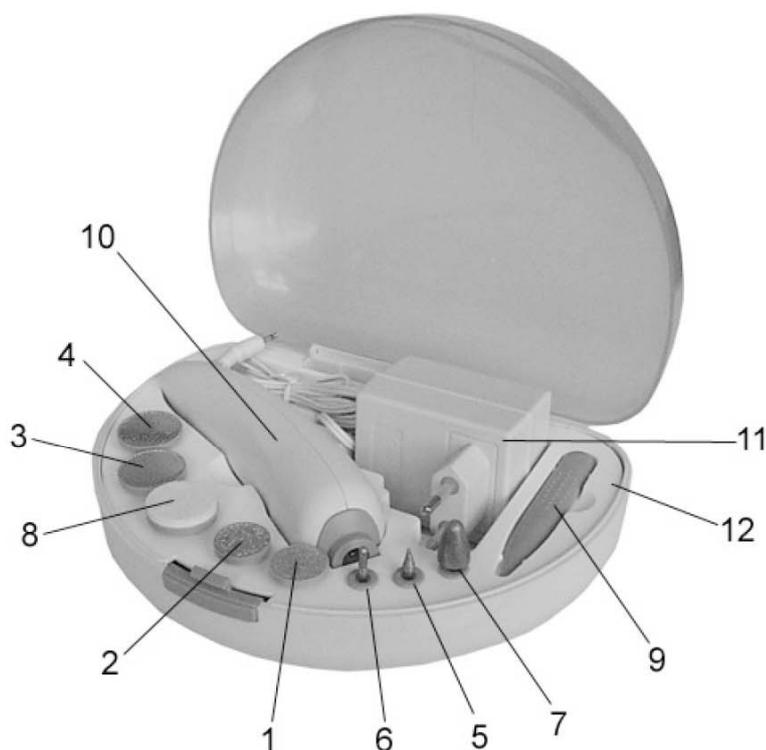

## HOW TO CHARGE

### Cordless

For cordless use, when used for the first time keep the appliance plugged to the socket for at least 24 hours. For next use, 6 hours will be enough.

To start with charge put the switch on "O". Connect the charger to the appliance and plug in the socket. The light will turn on to indicate the charge. Once the charge is over unplug the appliance from the socket.

### Use with direct plug

You can also use the appliance directly plugged to the socket if the battery is completely low. Use the provided cord.

When used the appliance directly plugged to the socket when the battery is completely low wait for 30 seconds before using the appliance to get the battery charged.

## USE

Once the cord is plugged, insert the charger into the socket after checking that the mains voltage corresponds to the data specified on the label.

Choose one of the accessories and start by pressing the switch.

For an optimal use of the appliance do not wet feet before use.

## CARE AND CLEANING

The provided charger/cord has been manufactured only for this appliance.

In case of damage, it can be changed by another new one.

Always unplug the appliance from the socket before cleaning.

Do not clean the appliance and case with liquids or abrasive detergents ; only use a wet cloth.

Every parts of accessories can be cleaned with alcohol 70 or 90°.

## TECHNICAL DATA

Power: 3W

Power supply: 23V ~ 50Hz

**For any improvement reasons, Beper reserves the right to modify or improve the product without any notice.**



The European directive 2011/65/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

# GUARANTEE CERTIFICATE

---

This appliance has been checked in the factory. From the date of original purchase a 24 month guarantee applies to material and production defects. The purchase receipt and the guarantee certificate must be submitted together in case of claim to guarantee.

**The guarantee is valid only with a guaranty certificate and proof of purchase (fiscal receipt) indicating the date of purchase and the model of the appliance**

For any technical assistance, please contact directly the seller or our head office in order to preserve the appliance's efficiency and NOT TO void the guarantee. Any intervention on this appliance by non-authorized persons will automatically void the guarantee.

## Guarantee conditions

If the appliance shows defects as a result of faulty material and/or production during the period of guarantee, we guarantee repair free of charge on condition that:

- The appliance has been used properly and for the purpose for which it has been intended.
- The appliance has not been tampered with, otherwise it is not maintainable.
- The purchase receipt shall be presented.
- The appliance showing a fair wear and tear shall not be covered by this guarantee.

Therefore, any part that could be accidentally broken or having visible signs of use in consumable products (such as lamps, batteries, heating elements...) the aesthetic parts are excluded from the guarantee, and any defect whatsoever resulting from non-respect of the rules for use, negligence in usage and/or maintenance of the appliance, carelessness, wrong or improper installation, damage during transport and any other damage not attributable the supplier.

For every defect that could not be repaired within the guarantee period, the appliance will be replaced free of charge.

In any case, if the part to be replaced for defect, breakage or malfunction is an accessory and/or a detachable part of the product, Beper reserves the right to replace only the very part in question and not the entire product

## Technical assistance

Even after the guarantee period we will always pay attention to repairs for defected appliances. For technical assistance and/or repairs after the guarantee period you can directly contact the below address:

---

CONTACT YOUR DISTRIBUTOR IN YOUR COUNTRY OR AFTER SALES DEPARTMENT  
BEPER. E-MAIL [assistenza@beper.com](mailto:assistenza@beper.com)  
WHICH WILL FORWARD YOUR ENQUIRIES TO YOUR DISTRIBUTOR.