


beper®

- LAMPADA UV PER GEL UNGHIE - MANUALE DI ISTRUZIONI
 - NAIL GEL UV LAMP - USE INSTRUCTIONS
 - LAMPE UV POUR ONGLES EN GEL
- MANUEL D'INSTRUCTIONS
- UV-NAGELTROCKNER - BETRIEBSANLEITUNG
- LÁMPARA UV PARA UÑAS - MANUAL DE INSTRUCCIONES

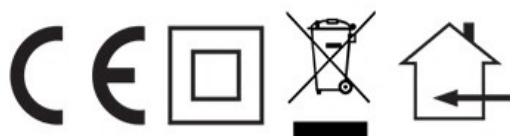

Cod.: 40.991A

PRECAUTIONS

Read the following instructions carefully, since they give you useful safety information about installation, use and maintenance and help you avoid mishaps and possible accidents.

Remove the packing and make sure that the appliance is intact, with special attention to the supply cable.

The elements of the packing (plastic bags, polystyrene, etc) do not have to be accessible to the children, in order to preserve them from danger sources. It is recommended not to throw these packing materials in the domestic waste, but to deliver them to the appropriate station of collection or destruction refusals, asking eventually information to the manager of the Sanitation Department of your own municipality.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Before connecting the appliance make sure that the mains voltage corresponds to the data specified on the label.

The appliance can be damaged if the voltage is not correct.

If the plug does not suit the socket, let it be replaced with another suitable plug by qualified personnel only, which shall also ensure that the section of the socket cables is suitable for your appliance power absorption.

Generally, the use adaptors multiple plugs and/or extensions is not recommended; should they be necessary, please use only simple or multiple adaptors and extensions in compliance with the safety rules in force, making sure that the capacity absorption limit marked on the simple adaptors and the extensions and the maximum power limit marked on the multiple adaptor are not exceeded.

Do not use the appliance if the cable or the plug shows any damages.

Do not use the appliance after a possible irregular working. In this case, switch it off and do not break it open. Refer to an authorized Beper after-sale service for repair and require original spare parts only. Failing to follow these instructions may impair the safety of your appliance.

This appliance is to be destined to its special purpose only. Any other use is to be considered as improper and thus dangerous. The manufacturer cannot be responsible for any damages deriving from improper, wrong or incautious use. This appliance is for HOUSEHOLD USE ONLY.

To protect against electric shock, do not immerse cord, plug or any parts of the appliance into water or other fluids.

Do not use the appliance near explosives, highly flammable materials, gases or burning flames.

Do not allow children, disabled people or every people without experience or technical ability to use the appliance if they are not properly watched over. Close supervision is necessary when any appliance used by or near children.

Do not hold the appliance with wet hands or feet.

Never use any accessories but those provided for by Beper. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.

Do not use the appliance near the bath, the shower, the wash-basin or anywhere water can turn out to be a source of danger.

Do not pull the mains cable or the appliance itself when disconnecting the plug from the socket.

Do not let cord hang over edge of table, or touch hot surface.

Do not expose the appliance to atmospheric agents such as rain, wind, snow, hail. Do not use outdoors.

Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.

If you decide not to use the appliance any longer, make it unserviceable by simply cutting the supply cable after disconnecting the plug from the socket. Also make any dangerous parts unserviceable, especially for children who could play with the appliance.

Let other potential users read these instructions.

Keep these instructions

INSTRUCTIONS FOR USE

This UV nail lamp has been manufactured only for household use and cannot be used for industrial or commercial use.

Do not try to open the UV nail lamp or any parts of it.

Never leave the appliance unattended as long as the power plug is connected with the power outlet.


Use only provided accessories.

A regular cleaning of this UV nail lamp will keep it intact as long as possible.

Do not use if the UV nail lamp is damaged; contact directly the provider or assistance centre.

DESCRIPTION Fig. 1

1. Lamp body in ABS plastic
2. 4 bulbs UV, 9W each
3. Cord supply
4. Switch on/off I/O, and "timer" II
5. Timer 120 seconds
6. Fuse
7. Mirror effect internal for a perfect drying
8. Slide base plate for plugging the bulbs

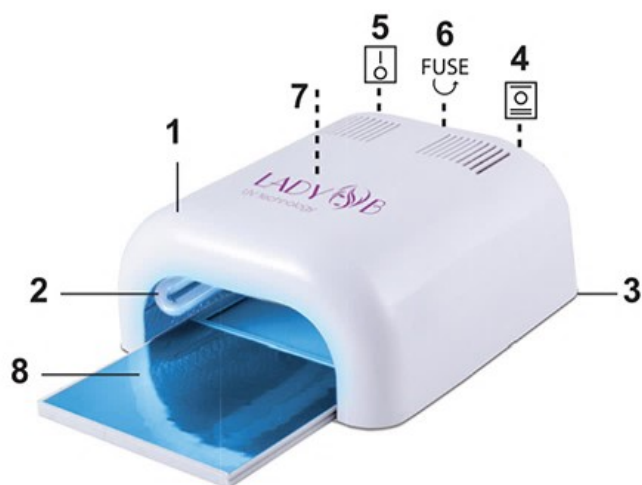

INSTRUCTION

Before use please read instructions carefully.

- While inserting or replacing the UV bulb the lamp has to be switched off and unplugged.
- Do not get into contact with water.
- If not in use, switch it off and disconnect from the power.
- To be used only for fingernail and toenail curing.
- Do not look straight into the illuminated bulbs.
- Note that over exposure to ultra violet radiation/UV lamps can cause skin or eye damage.
- Whenever you recognize a changing of the skin, seek medical advice.
- Children are not allowed to use the lamp without supervision of an adult.
- The lamp is for household indoor use only therefore never use it outdoor, that damages the quality of the gel used.
- Malfunction has to be solved by an expert.

ATTENTION : only use professional gel ; the bad quality gel may burn nails with the UV light of the appliance. In case of burns or if too hot, stop immediately. Put again the nails under the UV light only when it is cold and for max. 120 secondes.

How to plug the bulbs in: Fig. 2

- Take the unit out of the box.
- Do not plug it in yet.
- Remove the slide base plate.

Get the four bulbs ready to insert. Fig. 3

- Take the first one and plug it carefully into the socket with slight pressure until latched.
- Repeat the handling with the remaining bulbs.
- Remove the protective film from the base plate and slide it back in place.
- Connect the plug; make sure that the cable is flat on the ground.
- If needed use an extension.
- After the nail curing, place switch into the off position and unplug the connector.

USE

O = switch off

II = timer

I = switch on 

Red button: switch 120 second timer on.

CLEANING

- Clean only with a smooth dry cloth.
- Do not use any dissolver or detergent.
- Store in a dry and safe place. Keep out of reach of children.

TECHNICAL DATA

Power 220V–240V~50/60Hz

Max. capacity :36W

UV bulbs: 9W, 365 nm

For any improvement reasons, Beper reserves the right to modify or improve the product without any notice.



The European directive 2011/65/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed of in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain, and reduce the impact on human health and the environment. The crossed out “wheeled bin” symbol on the product reminds you of your obligation, that when you dispose of the appliance, it must be separately collected.

GUARANTEE CERTIFICATE

This appliance has been checked in the factory. From the date of original purchase a 24 month guarantee applies to material and production defects. The purchase receipt and the guarantee certificate must be submitted together in case of claim to guarantee.

For any technical assistance, please contact directly the seller or our head office in order to preserve the appliance's efficiency and NOT TO void the guarantee. Any intervention on this appliance by non-authorized persons will automatically void the guarantee.

Guarantee conditions

If the appliance shows defects as a result of faulty material and/or production during the period of guarantee, we guarantee repair free of charge on condition that:

- The appliance has been used properly and for the purpose for which it has been intended.
- Repairs are professionally carried out by qualified persons who are appointed by the supplier.
- The purchase receipt shall be presented.
- The appliance showing a fair wear and tear shall not be covered by this guarantee.

Therefore, any part that could be accidentally broken or having visible signs of use in consumable products (such as lamps, batteries, heating elements...) is excluded from the guarantee, and any defect whatsoever resulting from non-respect of the rules for use, negligence in usage and/or maintenance of the appliance, damage during transport and any other damage not attributable the supplier.

For every defect that could not be repaired within the guarantee period, the appliance will be replaced free of charge.

Technical assistance

Even after the guarantee period we will always pay attention to repairs for defected appliances. For technical assistance and/or repairs after the guarantee period you can directly contact the below address:

CONTACT YOUR DISTRIBUTOR IN YOUR COUNTRY OR AFTER SALES DEPARTMENT
BEPER. E-MAIL assistenza@beper.com
WHICH WILL FORWARD YOUR ENQUIRIES TO YOUR DISTRIBUTOR.