

# B.

Okideoke®



18 MONTHS TO 5 YEARS

## REPLACING BATTERIES

### 3 AAA (1.5V) BATTERIES INCLUDED

- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Dead batteries? Check out [earth911.com](http://earth911.com) to quickly find the recycling center nearest you.

Notch on cover must line up with corresponding hole to properly close battery compartment

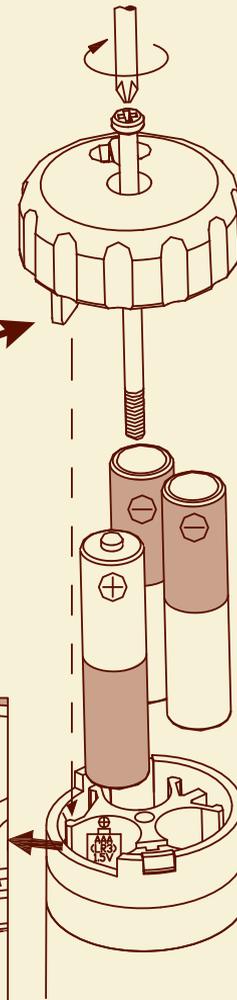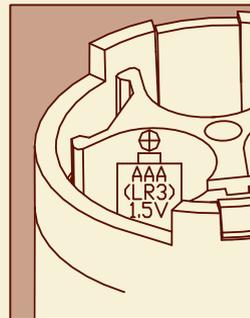

Created by DoodleDo  
for Maison Joseph Battat Ltd.  
Do what you love and do good.

© 2012 Maison Joseph Battat Ltd.  
B. and Okideoke and Just B. Just You. B. You  
are registered trademarks of  
Maison Joseph Battat Ltd.

Manufactured for Maison Joseph Battat Ltd.  
8440 Darnley Road, Montreal, P.Q. H4T 1M4  
Designed by Maison Joseph Battat Ltd.  
Consumer Information Line: 1-866-665-5524

B. hip to  
all things B.

If you have questions, comments  
or want to sing us a song, call us  
(toll free).

1-866-665-5524




# B.

## Okideoke

18 MONTHS TO 5 YEARS

### DON'T...

- Don't put Okideoke near any heat source or expose it to prolonged sunlight.
- Don't get Okideoke wet or immerse it in water.
- Don't point the Okideoke toward a loudspeaker, as this will result in loud feedback.
- Don't forget to take a bow and thank your fans after each performance.

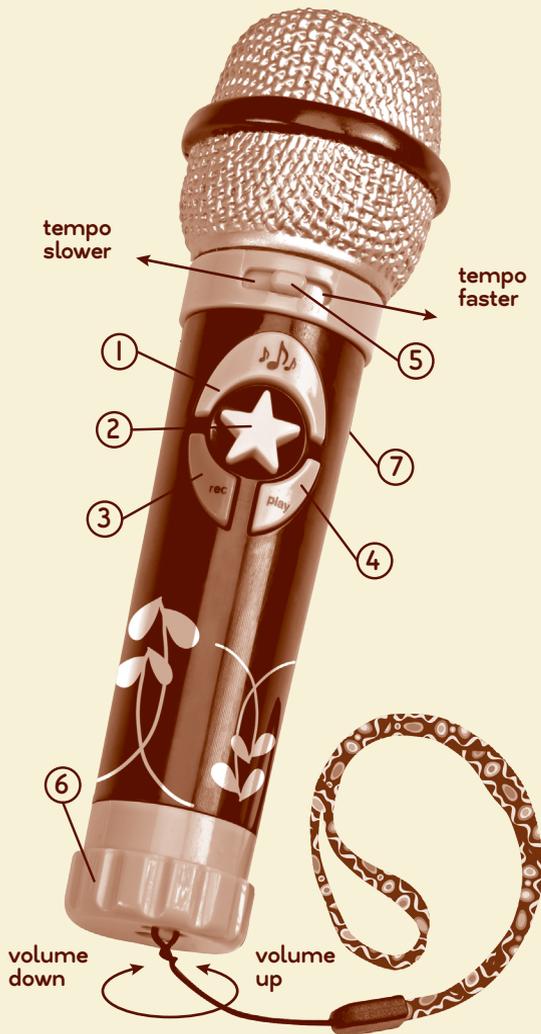

## FUNCTIONS

- 1. PLAY MUSIC BUTTON**  
Press once to play music. Press once more to play next tune. (When music is playing, voice won't be amplified.)
- 2. STAR BUTTON**  
Press and hold to amplify your voice while you sing into the microphone. Act like a star—put your mouth right on top of the microphone for best effect.
- 3. RECORD BUTTON**  
Press and hold to record your voice after the beep sounds. Release to stop recording.
- 4. PLAY-BACK BUTTON**  
Press to play back most recent recording.
- 5. TEMPO CONTROL SWITCH**  
Turn to the right to speed up the playback. Turn to the left to slow down the playback.
- 6. VOLUME CONTROL KNOB**  
Turn to the right to increase the volume. Turn to the left to decrease the volume.
- 7. ON/OFF POWER SWITCH (on back)**  
Switch the main power on or off.