


**ATTENTION! KEEP FOR FUTURE REFERENCE:
READ CAREFULLY!**

**INSTRUCTION MANUAL FOR USE
OF PLAYPEN AND CRIB „ARIEL”**

ARIEL

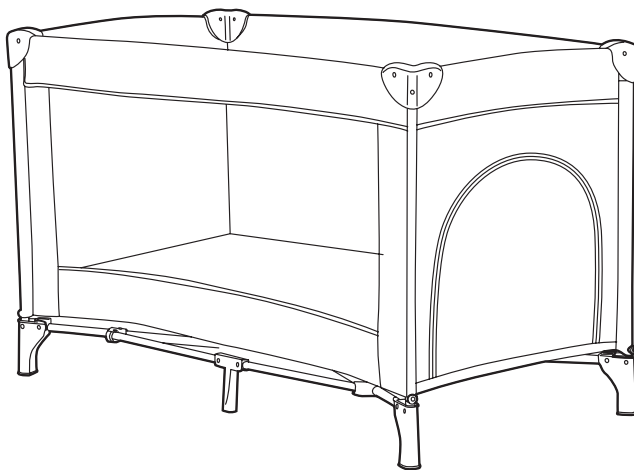

This playpen **chipolino** has been designed and manufactured in accordance with the Product Safety Directive 2001/95/EU of the European Parliament and the Council and to European standard EN 716-1 Children's cots and folding cots for domestic use, Part 1 Safety requirements as well as the regulations of national legislation including the consumer protection law.

ATTENTION! YOUR CHILD WILL BE MOST SECURE IF YOU FOLLOW THE INSTRUCTIONS AND RECOMMENDATIONS GIVEN IN THIS USER'S MANUAL!


ATTENTION!

- **WARNING!** NEVER LEAVE THE CHILD UNATTENDED!
- **WARNING!** MAKE SURE THIS PRODUCT IS NOT PLACED NEAR OPEN FIRE, OTHER SOURCE OF STRONG HEAT SUCH AS ELECTRIC BAR FIRES, GAS FIRES, ETC.!
- **WARNING!** DISCONTINUE THE USAGE OF THIS PRODUCT, IF YOU DAMAGED, TORN OR MISSING PARTS! USE ONLY SPARE PARTS OR OTHER COMPONENTS, WHICH ARE APPROVED BY THE PRODUCER! THE PRODUCER DOES NOT TAKE ANY RESPONSIBILITY FOR THE SAFETY OF THE CHILD WHEN YOU HAVE NOT USED THE PROPER AND ORIGINAL SPARE PARTS, APPROVED AND PROVIDED BY HIM!
- **WARNING!** DO NOT PLACE OBJECTS IN PLAYPEN OR NEAR IT WHICH CHILD CAN USE AS A SUPPORT OR ANY OTHER DANGEROUS OBJECTS CAUSING SUFFOCATION SUCH AS CORDS, STRINGS, ETC.!
- **WARNING!** DO NOT USE MORE THAN ONE MATTRESS IN THE PLAYPEN! ALWAYS PAY ATTENTION TO GIVEN MARKINGS OF APPROPRIATE LEVEL OF MATTRESS!
- **WARNING!** In case you use additional mattress or other mats, you must follow exactly the markings on the inner side of the playpen designating the maximum allowed height of the mattress top! It is very dangerous when the distance from the top of the mattress to the top rim of the playpen is less than 500 mm in the lowest position of the cot base and 200 mm in the highest position of the cot base.
- **WARNING!** Minimum size of length and width of used mattress in playpen must be so that the inner space between mattress and all sides of the play pen to be less than 30 mm!
- Do NOT use the playpen for one child at a time!
- The playpen must NOT be used for by a child who can climb and hand on it, because he/she can tip it over, fall down and get hurt!
- ALWAYS before use the playpen make sure that locking mechanisms are fully engaged. Only then the playpen is safe for usage!
- Use the second level of playpen only for children who CANNOT sit unaided and CANNOT roll or push up with hands and knees!
- Bottom level of playpen is safest for your child. Use it for children who can sit unaided!
- All fasteners must be always well tightened. They must be regularly reviewed and tighten if needed.
- Playpen to be used for a child weighting not more than 15 kg.
- Assembly, folding and unfolding of the playpen to be made only by adult!
- Place the playpen only on horizontal and flat surface!
- Do not allow children younger than 3 years near the stroller during the assembly or disassembly, in order to prevent the risk of injury or swallowing of small parts!
- The packaging of the product must be kept out of the reach of children to avoid the risk of strangulation!

MAIN FEATURES

- Playpen is suitable for newborn babies and children aged less than 15 kg.
- Second level of playpen – suitable for newborn babies;
- Big pocket for accessories;
- Entrance with zipper;
- Compact folding;
- Carry bag.

MAIN PARTS

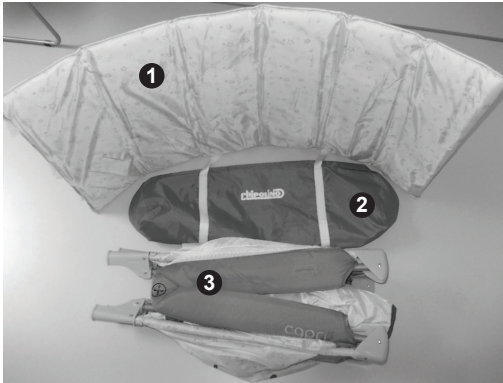

Please, make sure all described parts below are available:

1. Mat
2. Carry bag
3. Playpen
4. Second level
5. Tubes for second level (4 pcs)

ASSEMBLY INSTRUCTION AND FUNCTIONS

This playpen is supplied partially assembled. In order to complete the assembly, you don't need any tools.

ATTENTION! Follow exactly the instructions given and check the pictures/figures.

ATTENTION! After each operation, make sure that you have followed the instructions correctly and the fixing is stable.

ATTENTION! Properly fixing is often accompanied with click sound.

ATTENTION! Be careful to avoid finger entrapment during each operation!

Assembly and functions are given in figures 1-4. Use all descriptions below together with figures with the same number.

1 – OPEN THE PLAYPEN

2 – BOTTOM LEVEL OF PLAYPEN

3 – SECOND LEVEL OF PLAYPEN



4 – FOLDING AND PACKING

Note: Before folding the playpen you must remove the mat and all other additional accessories.

ATTENTION! Do not push stronger the rails if they don't fold from first time, because you may damage the mechanisms inside! Try again to follow all described actions.


Unfasten the velcro straps. Remove the mat

Open the sides

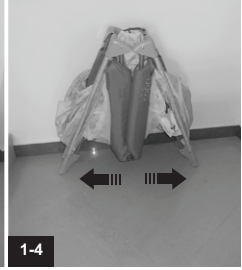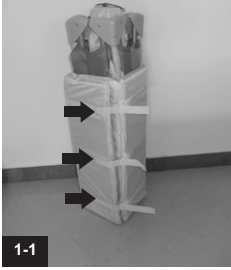

Pull the long rails and pull upwards until they fix

Pull the short rails and pull upwards until they fix


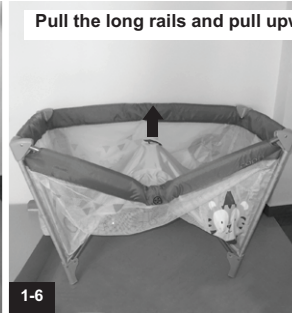


Press down the bottom center of the play pen
Fully unfolded playpen with locked rails




Place the mat

Insert the velcro straps through the holes

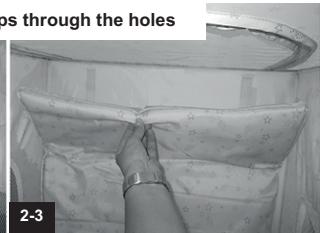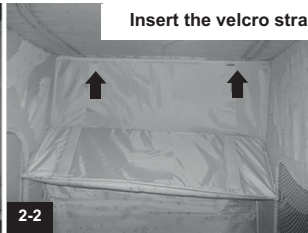

Fasten the velcro straps under the playpen

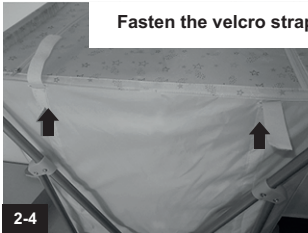


Attach the second level via zipper from inside of playpen




3-1

Close the zipper all way long

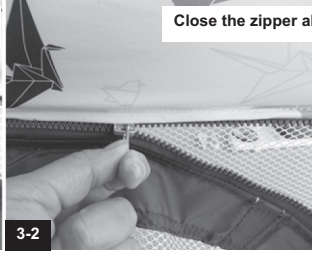

3-2

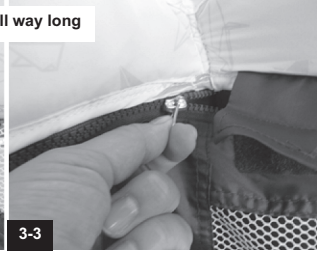


3-3



3-4



3-5

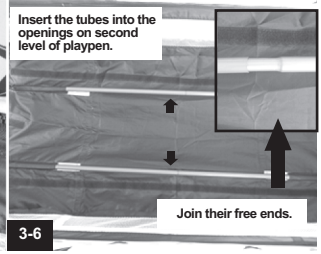

Insert the tubes into the openings on second level of playpen.

Join their free ends.

3-6


Place the pad over the second level. Insert the velcro straps into the openings of second level and close the velcro straps underneath.



3-7



3-8

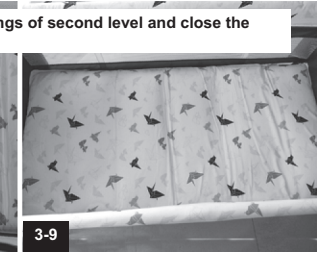

3-9

Pull upwards the bottom center of the playpen.




4-1



4-2



4-3

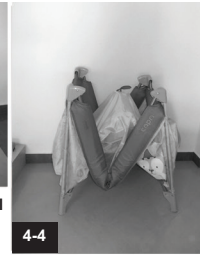

4-4

4 Release the mechanisms on each rail of the playpen under the fabric. Join all four sides of the playpen



4-5



4-6



4-7

CARE AND MAINTENANCE

- Do not push the rails mechanism strongly to avoid damages.
- Clean the fabrics, plastic parts and metal parts with damp cotton cloth or sponge and mild soap.
- Do not use abrasive, bleach or other aggressive detergents.
- Always after cleaning leave the playpen and mattress fully dry and after that use them or store them. It may appear mold if you keep them moist.
- Always store your product indoors. Do not expose to direct environment influence - sun, rain, moisture and high temperature intervals.
- Please, contact your authorized dealer for problems connected with the use or repair of this product.

Fabric content:

Shell: 100% polyester

Filling: 100% polyester



KOSIAR02xxxx



Bulgaria, Plovdiv, str. Golyamokonarskoshosse 1
www.chipolino.com