

GB Indoor weather station

Functions

- Calendar
 - shows year (1999-2099), month, day
- Clock
 - shows hours and minutes
 - hour system 12 or 24h
- Alarm
 - daily alarm setup
 - snooze option
- Weekdays showed in seven-segment MON/PN, TUE/WT, WED/SR, THU/CZ, FRI/PT, SAT/SO, SUN/N.
- Low battery sensor.
- Screen backlight.
- Comfort zone (dry, comfortable, moisture)
- Storage of air temperature and humidity measurements
 - temperature measurement range: 0°C - 60°C (32°F - 140°F)
 - humidity measurement range: 20% - 99% RH
 - temperature and humidity refreshing time is 60 seconds
 - temperature switch option °C/°F
 - 4-level forecast: sunny, semi-sunny, cloudy, rainy
 - 12-hour temperature change curve
 - storage of daily minimal/maximal temperature and humidity

Set current time

- In time mode, press „MODE“ and hold for 3 seconds, until digit flashes, to set hour using „UP“/„DOWN“.
- Press „MODE“ again, until digit flashes, to set minutes using „UP“/„DOWN“.
Digit value changes quicker by pressing „ADJ“ for longer time.

Set current date

- In time mode, press „MODE“ to set actual date.
- Press „MODE“ again and hold for 3 seconds, until digit flashes, to set year using „UP“/„DOWN“.
- Press „MODE“ again and hold for 3 seconds, until digit flashes, to set month using „UP“/„DOWN“.
- Redo action to set day.
Digit value changes quicker by pressing „ADJ“ for longer time.
Week changes automatically with date. Maximal day in February is 28 and in the leap year is 29.

Set alarm

- In any mode, press „MODE“ two times and hold for 3 seconds, until digit flashes, to set hour using „UP“/„DOWN“.
- Press „MODE“ again, until digit flashes, to set minutes using „UP“/„DOWN“.
Digit value changes quicker by pressing „ADJ“ for longer time.

Activating/Deactivating alarm

In any mode, press „UP“ to activate/deactivate alarm.

Function change

In any mode, press „MODE“ to change function: clock mode, date mode, alarm mode.
After few seconds, screen will return to standard mode automatically.

Temperature and humidity value

- In any mode, press „MAX/MIN“ to check minimal/maximal temperature and humidity recorded during actual day. After few seconds, screen will return to standard mode automatically.
Each day at 00:00, minimal/maximal temperature and humidity value recorded during actual day will be deleted automatically. Deleting value storage manually is not possible.
If power failure occurs, system will not save any memory.

Hour system 12/24h

In time mode, press „UP“ and hold for 3 seconds to switch hour system for 12/24h.

Temperature unit change

In time mode, press „DOWN“ to switch temperature unit °C/°F.

Snooze setup

When alarm beeps, press „SNZ“ to turn few-minute snooze on.

Screen backlight

In any mode, press „SNZ“ / „LIGHT“ to backlight the screen.
Screen will turn off automatically after few seconds.

Battery change

Remove battery cover, install 2 batteries AAA (not included in set) and close cover.

New battery should be installed, if screen is darker or sound is too low.

Used batteries should be recycled.
Do not use rechargeable batteries.

Care and maintenance

- Power supply: 2x AAA (1,5V)
- Station should be located in place free of moisture and sun to prevent any damage.
- Remove the battery, if station will not be used for longer time.
- Install battery again, if screen content is incorrect or invisible.