




2X3 LOW VERSION STORAGE FRAME

What's inside your kit:

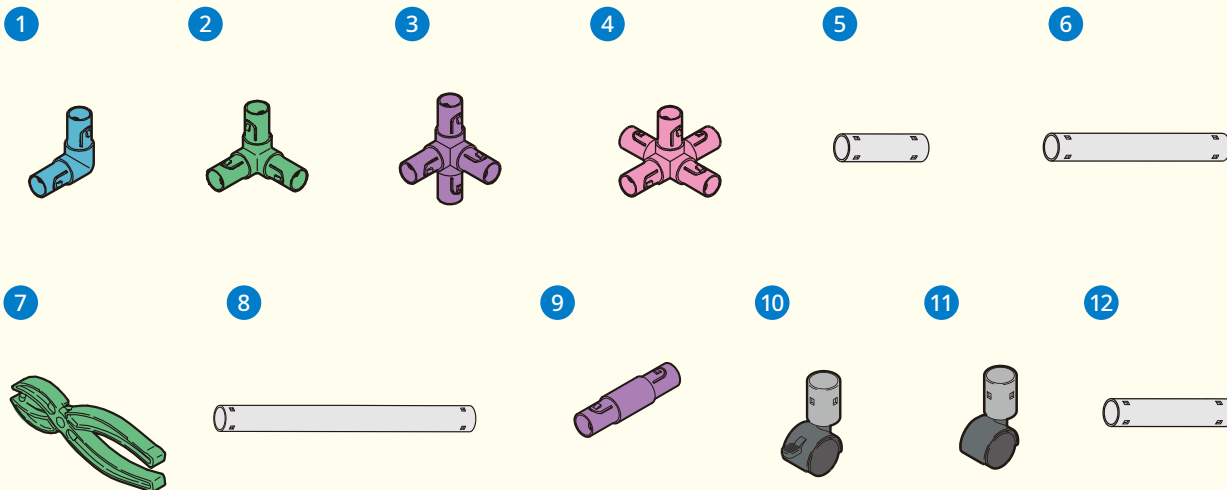

NO.	DESCRIPTION	QTY.	ITEM NO.
1	E-CORNER CONNECTOR	8	1060-W10-A1B2
2	E-3-WAY CONNECTOR	8	1060-W10-B1G
3	E-4-WAY CONNECTOR	12	1060-W10-D1P
4	E-5-WAY CONNECTOR	4	1060-W10-E1K
5	E-83mm TUBE	20	1060-W17-E3S
6	E-391mm TUBE	8	1060-W17-F8S
7	E-RELEASE PLIERS	1	1060-W85-M1G
8	E-597mm TUBE	18	1061-W17-B5S
9	E-STRAIGHT CONNECTOR	4	1136-W10-A1P
10	E-CASTER WITH LOCK	4	1136-W85-F2SR
11	E-CASTER	4	1136-W85-F1SR
12	E-178mm TUBE	8	1061-W17-A6S

INSTRUCTION MANUAL

Assembled by an adult.

IMPORTANT:

This set is intended for adult assembly only. Please read all instructions carefully before beginning.

1. Keep unused parts in the marked bag(s) until required.
Some parts appear similar and may be confused.
2. Assemble each section separately - as shown in the exploded diagrams.
3. If parts need to be loosened, use the included "release pliers" to assist you.
4. After each section is complete, assemble the completed sections together into the final unit.

ASSEMBLY & DISASSEMBLY

· How to Assemble & Disassemble Tubes and Connectors

Note: Do not hold a tube or connector where the insertion takes place, fingers may be pinched.

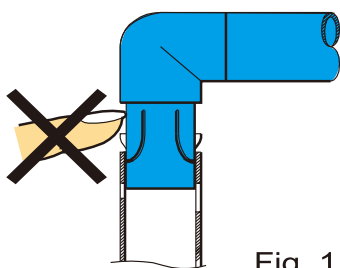


Fig. 1

- (1) Push the corner connector onto the tube and twist the tube until a "click" is heard.

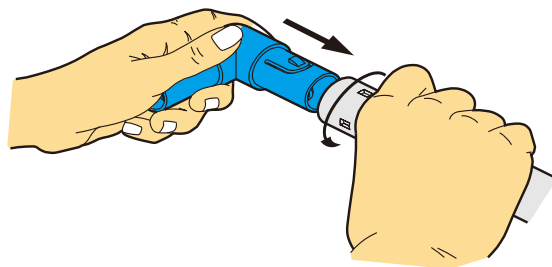


Fig. 2

- (2) Finish the assembly of both connectors with the tube in between. Then insert the connectors into two separate tubes to complete a panel. (Fig. 3-1)
Do not assemble the tubes and connectors one by one. (Fig. 3-2)

OK (EASY)

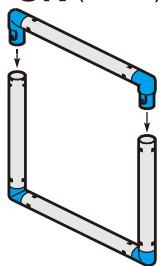


Fig. 3-1

NG (HARD)

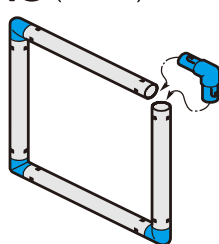


Fig. 3-2

- (3) Position the release plier nodes over the holes where the safety lock pins are visible. Squeeze gently to release the tube from the connector.



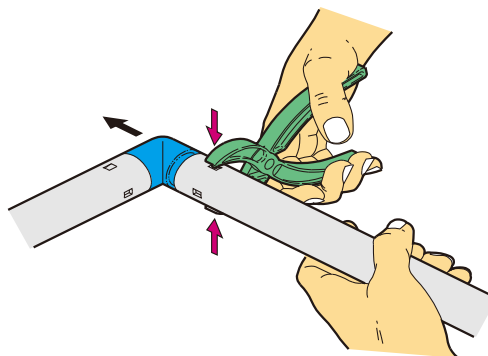


Fig. 4

2X3 LOW VERSION STORAGE FRAME

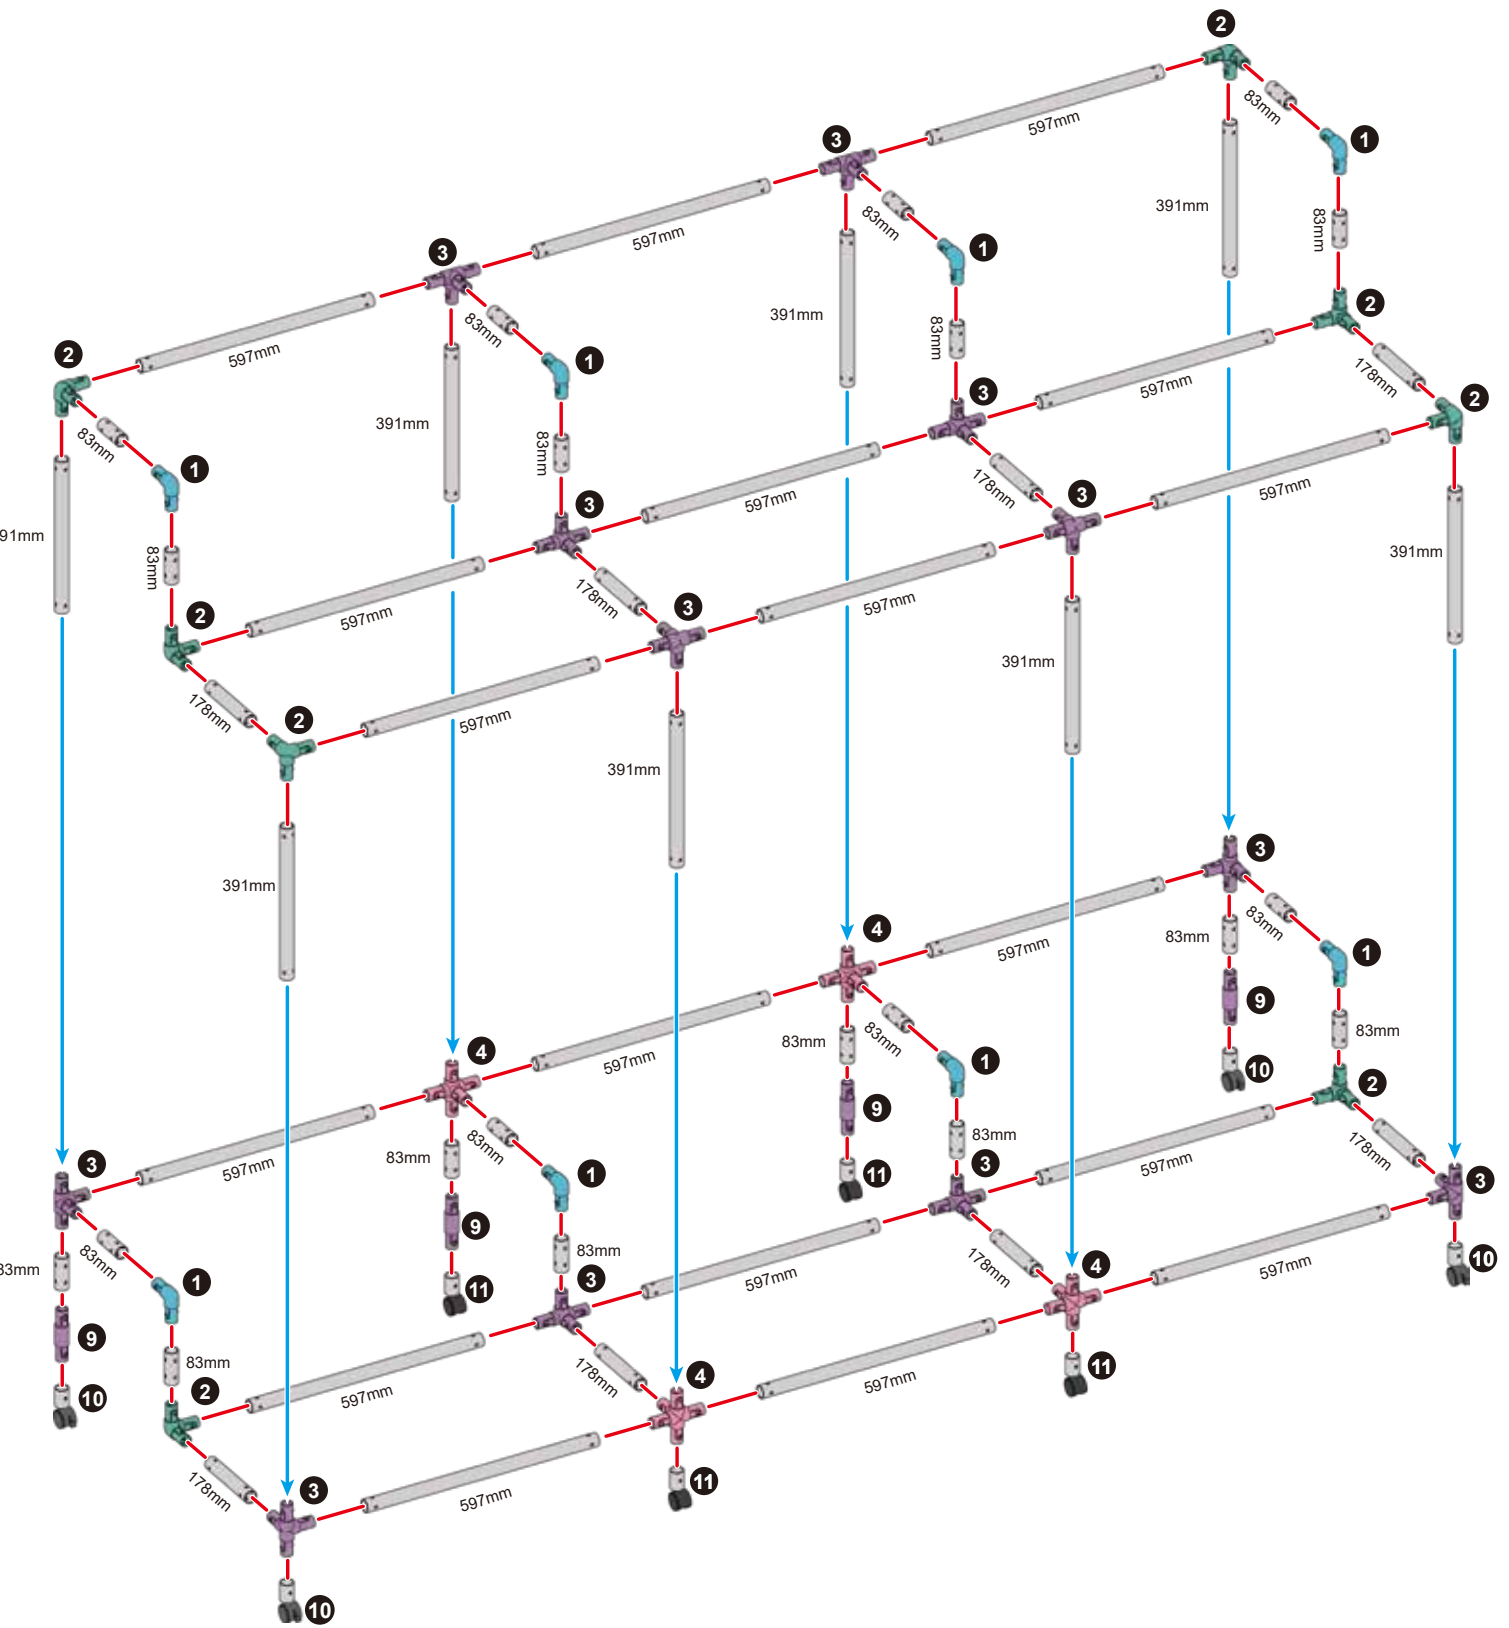

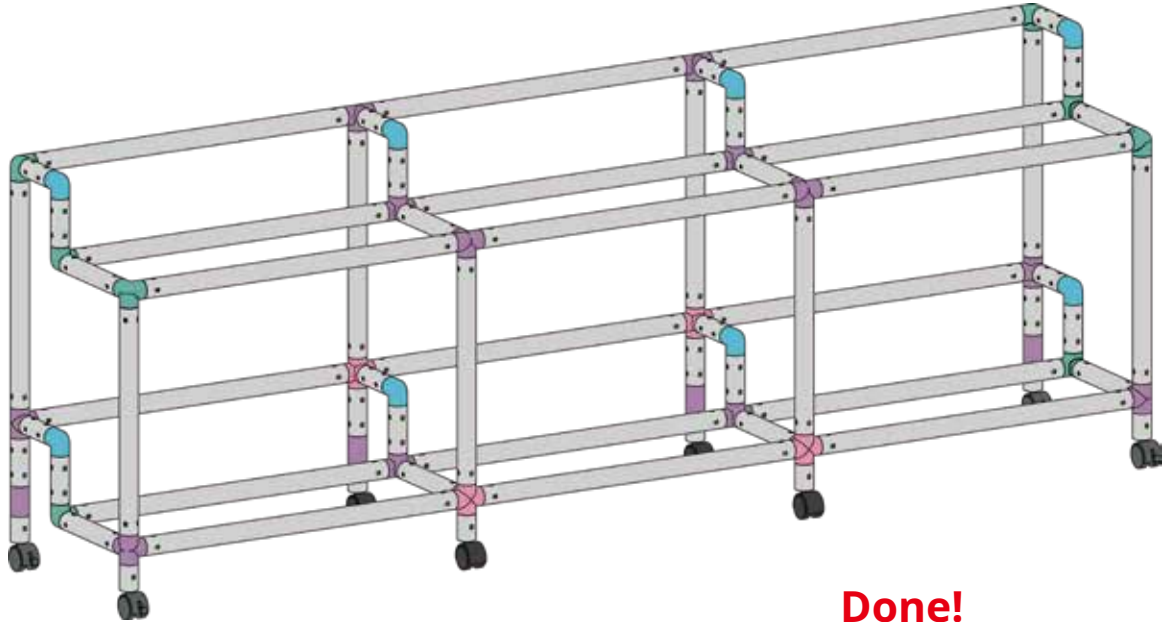

Done!



GENIUS TOY TAIWAN CO., LTD.
www.gigotoys.com

© 2021 Genius Toy Taiwan Co., Ltd. ALL RIGHTS RESERVED

R21#T159S