



Parts Locating Diagram

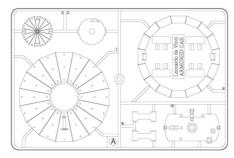

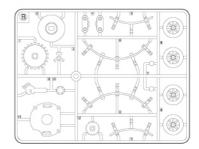

 





Spare parts: B7X1




Shaft 2EA




Spring Winding Unit

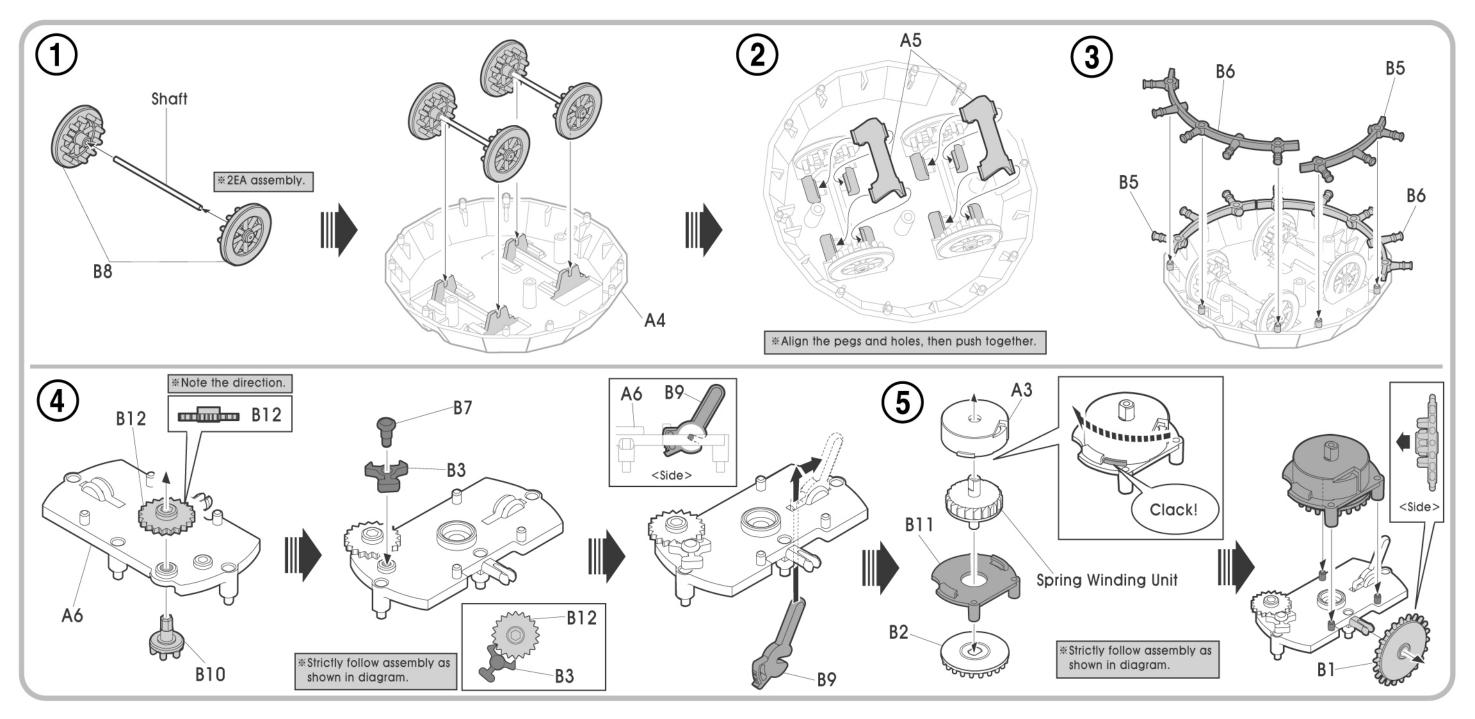

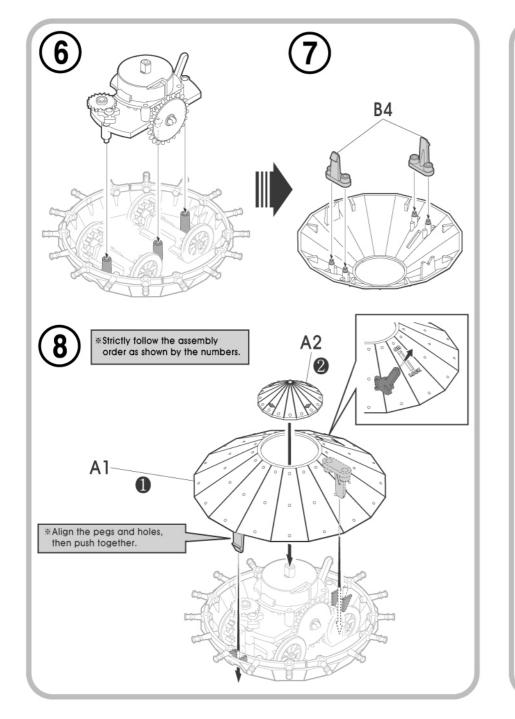


■Finished Model Views

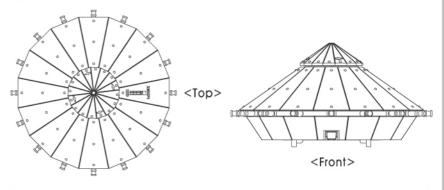

■How to Operate

*Follow these 4 step in the order shown.

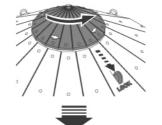

- 1 Put lever in the 'LOCK' position.
- 2 Wind in the direction of the arrows.
- When Spring Winding Unit stops, it is fully wound.
 Do not force beyond this point.
- Move lever to the "on" position.

