

# Porcelain and Glas Painter - Dishwasher-safe without oven fixing!



Here's how it's done - easy and quickly:

1. Pre-cleaning of crockery is very important and the best possible result can be achieved using a scouring agent and a small sponge. Afterwards they should be wiped with Marabu Cleaner & Thinner or White Spirit to remove any fingerprints.
2. Press onto the tip repeatedly until the ink is visible in it or stir the paint and start painting.
3. The painted item is ready for use after a drying time of 3 days.
4. Dishwasher-safe (max. 50 °C)



Additional information:

- To reduce the drying time, the painted object can be dried for 30 minutes at 100°C in the oven.
- Always make sure that the cutting surfaces, drinking rims or the insides of plates and cups are not painted, as abrasion can damage the design.
- Arcopal crockery is not suitable for painting with Porcelain and Glas Painters, as dishwasher-resistance cannot be guaranteed.

