

Always carefully try if the specified combination works on your machine. Experience has shown that what works for one machine, sometimes doesn't for another machine. The thickness (the grammage) of your paper helps in the determination of the different plates. If you use thicker paper (eg. 250 grams) you get a better result in embossing.

Cutting Method

- Use the Solo platform and the Solo shim as the base of the stack.
- Lay on it the Solo Thin adapter.
- Then you have to use a transparent acrylic cutting plate.
- On these layers you put the Creatable/Craftable with its cutting side up.
- After that the paper or card stock with the right side down towards the die.
- Cover the stack with another transparent cutting plate.
- If the die does not quite cut it right, you can put an extra piece of cardstock or thick paper under the bottom plates.
- Haul the stack with the Creatable/Craftable 2x through the Vagabond by shifting the direction towards you again after the first time the stack went through.

Emboss Method

- Use the Solo platform and the Solo shim as the base of your stack.
- Place on it a black Sizzix embossing plate or something similar. This time the Solo thin die adapter is not needed!
- Place the Creatable/Craftable, with the cut-out of the paper still in it, with its cutting side up on the stack.
- Cover it with a rubber embossingmat of Sizzix or Nestabilities.
- Cover the stack with a transparent cutting plate.