



# DREAM TIME

baby lounge/шезлонг



**MANUAL INSTRUCTION**  
ИНСТРУКЦИЯ ЗА УПОТРЕБА

## СЪДЪРЖАНИЕ/CONTENT

<b>BG</b>	Инструкция за употреба.....	3
<b>EN</b>	Manual Instruction.....	7

## ИЗИСКВАНИЯ ЗА БЕЗОПАСНОСТ

1. **ВНИМАНИЕ!** Никога не оставяйте детето без надзор!
2. **ВНИМАНИЕ!** Не използвайте шезлонга, щом детето Ви може да седи без чужда помощ!
3. **ВНИМАНИЕ!** Този шезлонг не е предназначен за продължителни периоди на спане!
4. **ВНИМАНИЕ!** Опасно е да използвате този шезлонг върху издигнати повърхности, като например маса!
5. **ВНИМАНИЕ!** Винаги използвайте ограничителната система!
6. **ВНИМАНИЕ!** Никога не използвайте грифа за играчки за носене на шезлонга!
7. Максималното тегло на детето, за което е предназначен шезлонга, е 9 кг.
8. Този шезлонг не замества кошара или легло! Ако детето ви трябва да спи, то трябва да бъде поставено в подходяща кошара или легло!
9. Не използвайте шезлонга, ако някои компоненти са счупени или липсват.
10. Не използвайте аксесоари или части за подмяна, различни от одобрените от производителя!
11. **ВНИМАНИЕ!** Грифът с играчки е допълнителен артикул. Никога не използвайте грифа за местене на продукта! Грифът трябва да се монтира от възрастен! Пазете немонтирания гриф далеч от достъпа на деца!
12. **ВНИМАНИЕ!** Не оставяйте детето без надзор! Не прикачвайте допълнителни конци и държачи върху играчката! Не променяйте играчката и не я пригодявайте към други предмети! Не връзвайте играчките заедно! Вземете играчките от спящото дете!



БДС EN 12790:2009  
БДС EN 71

- Поставяйте столчето върху хоризонтални и равни повърхности.
- При регулиране положението на облегалката, следва да се убедите, че механизмът е добре заключен в избраната позиция.
- При регулиране положението на поставката за хранене, следва да се убедите, че и двата механизма са добре заключени в избраната позиция.
- Не използвайте шезлонга като столче за кола, тъй като това не е неговото предназначение.
- Не оставяйте шезлонга до работещ вентилатор, отоплителни прибори, остри предмети, съдове с вода.
- При пренасяне на шезлонга използвайте дръжката.

Този шезлонг спада към преносимите артикули за бебешка употреба. Може да се използва като люлка, кошница и стол за хранене. Снабден със сенник, този шезлонг предпазва Вашето дете от пряка слънчева светлина и е много подходящ за употреба навън.

**1. Функция люлка:**

- Люлеенето на стола става с ръка. Интервала на люлеене може да се коригира в зависимост от различните нужди. Облегалката има 3 позиции: за сядане, облегат наполовина и за лежане.

**2. Функция кошница:**






- Когато поставката за хранене е в позицията, показана на снимка 4а, шезлонгът може да се използва като кошница.

**3. Функция хранене:**

- продуктът е снабден с поставка за хранене и може да бъде използван като стол за хранене, когато скобите са застопорени.

## ГРИЖА И ПОДДРЪЖКА

1. Тапицериата на шезлонга може да се пере в автоматична пералня при температура до 30°.
2. Металните и пластмасовите части се почистват с хладка вода и мек препарат за почистване.

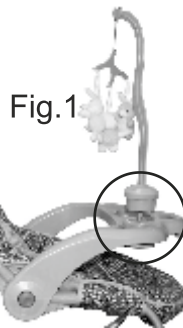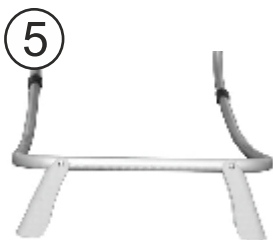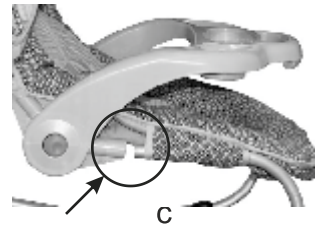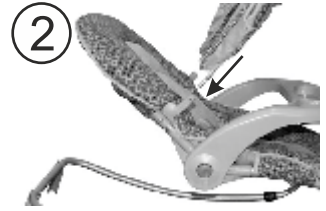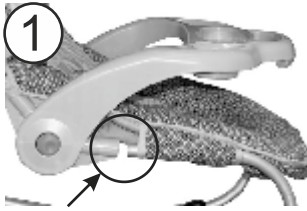

## МОНТИРАНЕ

1. Монтирайте поставката за хранене към тръбата на металната конструкция, както е показано на снимка 1.
2. Поставете извитата тръба на сенника в пластмасовите елементи в долната част на шезлонга и я закрепете посредством болтовете. (снимка 2)

## РЕГУЛИРАНЕ ПОЗИЦИЯТА НА ОБЛЕГАЛКАТА

Седалката може да бъде нагласена на 3 позиции. Задръжте механизма за регулиране с една ръка. Отпуснете механизма за регулиране, когато облегалката е нагласена до нужната позиция. Тя ще се заключи автоматично, като се чуе "кликване". (снимка 3)

## РЕГУЛИРАНЕ ПОЗИЦИЯТА НА ПОСТАВКАТА ЗА ХРАНЕНЕ

Поставката за хранене може да бъде нагласена на 2 позиции. Натиснете бутоните за регулиране, разположени от двете страни на поставката за хранене (снимка 4с). Уверете се, че поставката за хранене е заключена.

## ФИКСИРАНЕ НА ШЕЗЛОНГА

Шезлонгът може да бъде фиксиран, когато положението на скобите е както на снимка 5.

## МОНТИРАНЕ И ДЕМОНТИРАНЕ НА ИГРАЧКАТА

### 1. Монтиране:

- поставете основата на играчката в съответния отвор на плота за хранене (фиг.1) и се уверете, че цилиндричният обект от долната част на основата на играчката е в отвора, както е показано на фиг. 2.

### 2. Демонтиране:

- натиснете цилиндричния обект от долната част на основата на играчката извън отвора на плота за хранене.

## SAFETY REQUIREMENTS

1. **WARNING!** Never leave the child unattended!
2. **WARNING!** Do not use the reclined cradle once your child can sit unaided!
3. **WARNING!** This reclined cradle is not intended for prolonged periods of sleeping!
4. **WARNING!** It is dangerous to use this reclined cradle on an elevated surface, e.g. a table!
5. **WARNING!** Always use the restraint system!
6. **WARNING!** Never use the toy bar to carry the reclined cradle!
7. The maximum weight of the child for which the reclined cradle is intended is 9 kg.
8. This reclined cradle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable cot or bed!
9. Do not use the reclined cradle if any components are broken or missing!
10. Do not use accessories or replacement parts other than those approved by the manufacturer!
11. **WARNING!** The toy bar is an additional article! The toy bar has to be installed by an adult! Keep removed toy bar on a safety place!
12. **WARNING!** Do not attach any additional toys on the toy bar! Do not replace the toy bar! Do not bind the toys together! Take the toys while your child sleeps!



EN 12790:2009; EN 71

- Put the rocker on horizontal and even surfaces.
- On adjusting the backrest you must be sure that both mechanisms are well locked in the chosen position.
- On adjusting the feeding tray you must be sure that both mechanisms are well locked in the chosen position.
- Do not use the rocker as a car seat as this is not its function.
- Do not leave the rocker near a switched on fan, heat sources, sharp objects and water containers.
- When carrying the rocker use the handles.

This rocking chair belongs to portable articles for baby use. It can be used as a cradle, a hand-basket and an eating chair. Equipped with a canopy this rocking chair protects your child from direct sunlight and is very convenient for outdoor activities.

**1. Function as a cradle:**

- The swing of the rocking chair should be operated by hand. The swing range can be adjusted according to different needs. The backrest has 3 positions: seating position, leaning halfway down and lying.

- On adjusting the backrest you must be sure that both mechanisms are well locked in the chosen position.

**2. Function as a hand-basket:**

- When the feeding tray is put in the position, shown on picture 4a, it can be used as a hand basket.

**3. Function as an eating chair:**

- The product is equipped with a feeding tray and it can be used as an eating chair when the brackets are fixed.

## MAINTENANCE AND CARE

1. The cover of the rocker can be washed in a washing machine and the temperature shouldn't be higher than 40°.

2. The metal and plastic parts can be cleaned with lukewarm water and mild soap detergent.



## INSTALLATION

1. Install the feeding tray to the pipe of the metal construction as shown on picture 1.
2. Insert the curved pipe of canopy into the plastic elements located on the bottom of rocking chair and fix it by using the bolts. (picture 2)

## ADJUSTING THE POSITION OF THE BACKREST

The backrest can be adjusted to 3 positions. Hold the adjusting mechanism with one hand. Loosen the adjusting mechanism when the backrest is adjusted to the needed position. It will be locked automatically by "click" sound. (picture 3)

## ADJUSTING THE POSITION OF THE FEEDING TRAY

The feeding tray can be adjusted to 2 positions. Press the adjusting buttons located on the both sides of the feeding tray (picture 4c). Make sure that the feeding tray is locked.

## FIXATION OF THE ROCKING CHAIR

The rocking chair can be fixed when the position of the brackets are as shown on picture 5.

## INSTALLATION AND REMOVAL OF THE TOY

### 1. Installation:

- insert the base of the toy into corresponding hole on the feeding tray (fig.1) and ensure that cylindrical object on the bottom side of the base is in the hole, as shown on fig.2.

### 2. Removal:

- push the cylindrical object on the bottom side of the toy out of the hole in the base of feeding tray.



Дидис ООД, България  
Шумен 9700, "Правда" 1  
Тел.: 054/850 830  
Факс: 054/850 839  
e-mail: office@didis-ltd.com

Didis LTD, Bulgaria  
Shumen 9700, "Pravda" 1 Str.  
Tel.: +359 54 850 830  
Fax: +359 54 850 839  
e-mail: office@didis-ltd.com

[www.lorelli.eu](http://www.lorelli.eu)